

#### Includes:

- Important Safety Information
- Operating Instructions
- Maintenance and Storage

# Z1000 Motorcycle OMICS MANUAL

## **A WARNING**

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

## NOTICE

THIS PRODUCT HAS BEEN MANUFACTURED FOR USE IN A REASONABLE AND PRUDENT MANNER BY A QUALIFIED OPERATOR AND AS A VEHICLE ONLY.

# **Quick Reference Guide**

This Quick Reference Guide will assist you in finding the information you're looking for.

**GENERAL INFORMATION** 

**HOW TO RIDE THE MOTORCYCLE** 

SAFE OPERATION

**MAINTENANCE AND ADJUSTMENT** 

STORAGE

TROUBLESHOOTING GUIDE

A Table of Contents is included after the Foreword.

Whenever you see the symbols shown below, heed their instructions! Always follow safe operating and maintenance practices.

## **A** DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

# **A** WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## **A** CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

## **NOTICE**

NOTICE is used to address practices not related to personal injury.

#### NOTE

 This note symbol indicates points of particular interest for more efficient and convenient operation.

#### **FOREWORD**

Congratulations on your purchase of a new Kawasaki motorcycle. Your new motorcycle is the product of Kawasaki's advanced engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Please read this Owner's Manual carefully before riding so that you will be thoroughly familiar with the proper operation of your motorcycle's controls, its features, capabilities, and limitations. This manual offers many safe riding tips, but its purpose is not to provide instruction in all the techniques and skills required to ride a motorcycle safely. Kawasaki strongly recommends that all operators of this vehicle enroll in a motorcycle rider training program to attain awareness of the mental and physical requirements necessary for safe motorcycle operation.

To ensure a long, trouble-free life for your motorcycle, give it the proper care and maintenance described in this manual. For those who would like more detailed information on their Kawasaki Motorcycle, a Service Manual is available for purchase from any authorized Kawasaki motorcycle dealer. The Service Manual contains detailed disassembly and maintenance information. Those who plan to do their own work should, of course, be competent mechanics and possess the special tools described in the Service Manual.

Keep this Owner's Manual aboard your motorcycle at all times so that you can refer to it whenever you need information.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when it is sold.

All rights reserved. No part of this publication may be reproduced without our prior written permission.

This publication includes the latest information available at the time of printing. However, there may be minor differences between the actual product and illustrations and text in this manual.

All products are subject to change without prior notice or obligation.

# KAWASAKI HEAVY INDUSTRIES, LTD. Consumer Products & Machinery Company

© 2009 Kawasaki Heavy Industries, Ltd.

Sep. 2009. (1). (S, Ke)

## TABLE OF CONTENTS

SPECIFICATIONS	7	Fuel Tank	35
SERIAL NUMBER LOCATIONS	11	Fuel Requirement	36
LOCATION OF PARTS	12	Side Stand	39
LOADING AND ACCESSORIES		Seats	40
INFORMATION	15	Tool Kit	44
GENERAL INFORMATION	18	Air Cleaner Intake	44
Meter Instruments	18	Meter Unit Mounting Angle	45
Digital Meter	19	Rear View Mirror	46
Warning/Indicator Lights	25	BREAK-IN	47
Key	27	HOW TO RIDE THE MOTORCYCLE.	49
Ignition Switch/Steering Lock	29	Starting the Engine	49
Left Handlebar Switches	31	Jump Starting	52
Dimmer Switch	31	Moving Off	55
Turn Signal Switch	31	Shifting Gears	56
Horn Button	31	Braking	58
Right Handlebar Switches	32	Stopping the Engine	59
Engine Stop Switch	32	Stopping the Motorcycle in an	
Starter Button	32	Emergency	60
Brake Lever Adjuster			~ 4
Diake Level Adjuster	33	Parking	61

SAFE OPERATION	65	Drive Chain 115	5
Safe Riding Technique	65	Brakes 124	1
Daily Safety Checks	68	Brake Light Switches 128	3
Additional Considerations for High		Front Fork 130	)
Speed Operation	71	Rear Shock Absorber 134	1
MAINTENANCE AND ADJUSTMENT	73	Wheels 137	7
Periodic Maintenance Chart	78	Battery 143	3
Engine Oil	89	Headlight Beam 148	3
Cooling System		Fuses 150	)
Spark Plugs	101	General Lubrication 152	2
Evaporative Emission Control		Cleaning Your Motorcycle 153	3
System (California model only)	102	Bolt and Nut Tightening 159	)
Valve Clearance	103	STORAGE 162	2
Kawasaki Clean Air System	104	TROUBLESHOOTING GUIDE 165	5
Exhaust Device	105	OWNER SATISFACTION 166	3
Air Cleaner	106	REPORTING SAFETY DEFECTS 168	3
Throttle Control System	107	<b>ENVIRONMENTAL PROTECTION</b> 169	9
Engine Vacuum Synchronization	110	MAINTENANCE RECORD 170	)
Idle Speed	110	LOCATION OF LABELS 174	1
Clutch	112		

## **SPECIFICATIONS**

#### **DIMENSIONS**

Overall Length 2 095 mm (82.5 in.)

Overall Width 805 mm (32.0 in.)

Overall Height 1 085 mm (43.0 in.)

Wheelbase 1 440 mm (57.0 in.)

Road Clearance 140 mm (6.0 in.)

Curb Mass 218 kg (481 lb)

#### **ENGINE**

Type DOHC, 4-cylinder, 4-stroke, liquid-cooled

Displacement 1 043 cm<sup>3</sup> (64.0 cu in.)

Bore × Stroke  $77.0 \times 56.0 \text{ mm} (3.0 \times 2.2 \text{ in.})$ 

Compression Ratio 11.8:1

Starting System Electric starter

Cylinder Numbering Method Left to right, 1-2-3-4

Firing Order 1-2-4-3

#### **8 SPECIFICATIONS**

Primary Reduction Ratio

Final Reduction Ratio

	Fuel System	FI (Fuel Injection)
	Ignition System	Battery and coil (transistorized ignition)
	Ignition Timing (Electronically advanced)	10° BTDC @1 100 r/min (rpm) ~ 40.2° BTDC @5 200 r/min (rpm)
	Spark Plugs	NGK CR9EIA-9
	Lubrication System	Forced lubrication (wet sump)
	Engine Oil:	
	Туре	API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2
	Viscosity	SAE 10W-40
	Capacity	4.0 L (4.2 US qt)
	Coolant Capacity	2.9 L (3.1 US qt)
T	RANSMISSION	
	Transmission Type	6-speed, return shift
	Clutch Type	Wet, multi disc
	Driving System	Chain drive

1.627 (83/51)

2.800 (42/15)

J17M/C × MT3.50

J17M/C × MT6.00

Rim Size: Front

Rear

#### 10 SPECIFICATIONS

Fuel Tank Capacity 15.5 L (4.1 US gal)

## ELECTRICAL EQUIPMENT

Battery 12 V 8 Ah

Headlight:

High Beam 12 V 55 W

Low Beam 12 V 55 W


Tail/Brake Light LED

Even if one of LED (Light Emitting Diode) tail/brake lights does not go on, consult with an authorized Kawasaki dealer. Specifications are subject to change without notice, and may not apply to every country.

## SERIAL NUMBER LOCATIONS


The engine and frame serial numbers are used to register the motorcycle. They are the only means of identifying your particular machine from others of the same model type. These serial numbers may be needed by your dealer when ordering parts. In the event of theft, the investigating authorities will require both numbers as well as the model type and any peculiar features of your machine that can help them identify it.

Frame No.

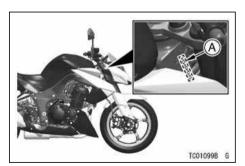


A Frame Number

**Engine No.** 

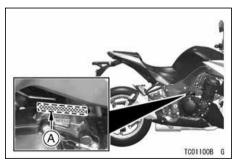


A. Engine Number

## LOCATION OF PARTS

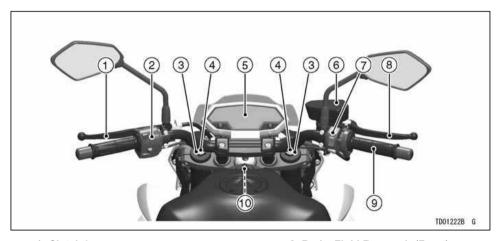

- 1. Clutch Lever
- 2. Left Handlebar Switches
- 3. Spring Preload Adjuster
- 4. Rebound Damping Force Adjuster
  5. Meter Instruments

- 6. Brake Fluid Reservoir (Front)7. Right Handlebar Switches
- 8. Front Brake Lever
- 9. Throttle Grip
- 10. Ignition Switch/Steering Lock

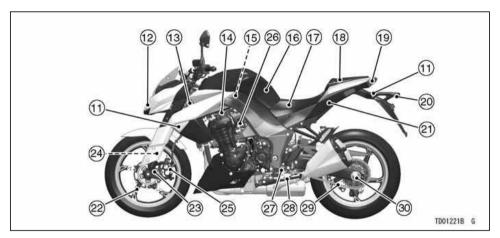


- 11. Turn Signal Lights
- 12. Headlight
- 13. Air Cleaner Intake
- 14. Spark Plugs
- 15. Air Cleaner
- 16. Fuel Tank
- 17. Rider's Seat
- 18. Passenger's Seat

- 19. Tail/Brake Light
- 20. License Plate Light
- 21. Seat Lock
- 22. Brake Disc
- 23. Compression Damping Force Adjuster
- 24. Front Fork

- 25. Brake Caliper
- 26. Idle Adjusting Screw
- 27. Shift Pedal
- 28. Side Stand
- 29. Drive Chain
- 30. Chain Adjuster

#### 14 LOCATION OF PARTS

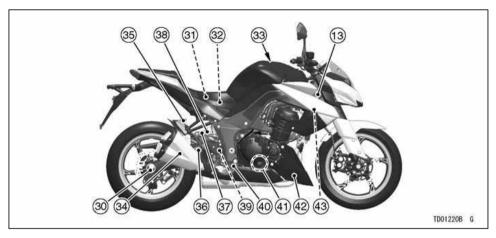

- 31. Fuse Box
- 32. Battery
- 33. Fuel Tank Cap
- 34. Muffler
- 35. Brake Fluid Reservoir (Rear)
- 36. Swingarm
- 37. Rebound Damping Force Adjuster

- 38. Rear Shock Absorber
- 39. Rear Brake Light Switch 40. Rear Brake Pedal
- 41. Oil Level Gauge
- 42. Oil Filter
- 43. Coolant Reserve Tank

## LOADING AND ACCESSORIES INFORMATION

# **▲** WARNING

Incorrect loading, improper installation or use of accessories. or modification of your motorcycle may result in an unsafe riding condition. Before you ride the motorcycle, make sure that the motorcycle is not overloaded and that you have followed these instructions.

With the exception of genuine Parts and Accessories. Kawasaki Kawasaki has no control over the design or application of accessories. In some cases, improper installation or use of accessories, or motorcycle modification, will void the motorcycle

warranty, can negatively affect performance, and can even be illegal. In selecting and using accessories, and in loading the motorcycle, you are personally responsible for your own safety and the safety of other persons involved

#### NOTE

O Kawasaki Parts and Accessories have been specially designed for use on Kawasaki motorcycles. We strongly recommend that all parts and accessories you add to your motorcycle be genuine Kawasaki components.

Because a motorcycle is sensitive to changes in weight and aerodynamic forces, you must take extreme care in

#### 16 LOADING AND ACCESSORIES INFORMATION

carrying cargo, passengers and/or in fitting additional accessories. The following general guidelines have been prepared to assist you in making your determinations.

- Any passenger should be thoroughly familiar with motorcycle operation. The passenger can affect control of the motorcycle by improper positioning during cornering and sudden movements. It is important that the passenger sits still while the motorcycle is in motion and not interfere with the operation of the motorcycle. Do not carry animals on your motorcycle.
- You should instruct any passenger before riding to keep his or her feet on the passenger footpegs and hold on to the operator or seat strap. Do not carry a passenger unless he or she is tall enough to reach the footpegs and footpegs are provided.

- All baggage should be carried as low as possible to reduce the effect on the motorcycle center of gravity. Baggage weight should also be distributed equally on both sides of the motorcycle. Avoid carrying baggage that extends beyond the rear of the motorcycle.
- 4. Baggage should be securely attached. Make sure that the baggage will not move around while you are riding. Recheck baggage security as often as possible (not while the motorcycle is in motion) and adjust as necessary.
- Do not carry heavy or bulky items on a luggage rack. They are designed for light items, and overloading can affect handling due to changes in weight distribution and aerodynamic forces.

- 6. Do not install accessories or carry baggage that impairs the performance of the motorcycle. Make sure that you have not adversely affected any lighting components, road clearance, banking capability (i.e., lean angle), control operation, wheel travel, front fork movement. or any other aspects of the motorcycle's operation.
- 7. Weight attached to the handlebar or front fork will increase the mass of the steering assembly and can result in an unsafe riding condition.
- 8. Fairings, windshields, backrests, and other large items have the capability of adversely affecting stability and handling of the motorcycle, not only due to their weight, but also due to the aerodynamic force acting on these surfaces while the motorcycle is in operation. Poorly

- designed or installed items can result in an unsafe riding condition.
- 9. This motorcycle is not intended to be equipped with a sidecar or to be used to tow any trailers or other vehicles. Kawasaki does not manufacture sidecars or trailers for motorcycles and cannot predict the effects of such accessories on handling or stability, but can only warn that the effects can be adverse and that Kawasaki cannot assume responsibility for the results of such unintended use of the motorcycle. Furthermore, any adverse effects on motorcycle components caused by the use of such accessories will not be remedied under warranty.


#### Maximum Load

Weight of rider, passenger, baggage, and accessories must not exceed 180 kg (397 lb).

## **GENERAL INFORMATION**


#### **Meter Instruments**

- A. Left Button
- B. Left Turn Signal Indicator Light
- C. Digital Meter
- D. Right Turn Signal Indicator Light
- E. Right Button
- F. Warning Indicator Light
- G. Coolant Temperature Warning Indicator Light
- H. Neutral Indicator Light
- I. High Beam Indicator Light

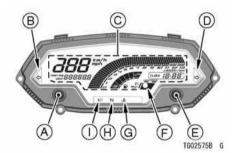

## **Digital Meter**

The digital meter displays the following functions: the speedometer, tachometer gauge, clock, trip meter AB, odometer, fuel gauge, oil pressure warning symbol and fuel injection warning symbol. When the ignition key is turned to "ON", all the LCD segments are displayed for about one second, then, depending on the mode selected, the meters operate normally.

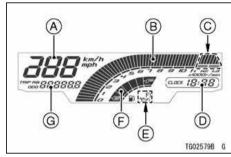

- A. Speedometer
- B. Tachometer Gauge
- C Red Zone
- D. Clock
- E. Fuel Injection ( FI )/Oil Pressure

Warning Symbol ( )

- F. Fuel Gauge
- G. Odometer/Trip Meter AB

## km/h·mph Display -

km/h·mph Display can alternate between metric and English modes (km/h and mph) in the meter unit. Make sure


#### 20 GENERAL INFORMATION

that km/h or mph according to local regulations is correctly displayed before riding.

#### **NOTE**


On not operate the vehicle with the meter unit displaying in the wrong unit (km/h or mph). Shift the km/h·mph display in the meter unit as follows.

- Display the odometer.
- The km/h·mph display shifts by pushing the right button while the left button pushed in.

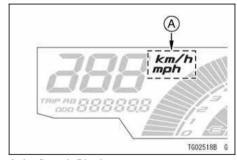

A. km/h·mph Display

• The km/h·mph display shifts as follows

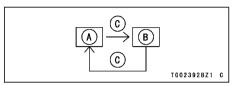

- A km/h
- B. mph
- C. Push Right Button with Left Button in

#### NOTE

OThe data is maintained even if the battery is disconnected.

## Speedometer -

The speedometer shows the speed of the vehicle in digital values.

## Tachometer Gauge -

The tachometer shows the engine speed in revolutions per minute (r/min,

rpm). On the right side of the tachometer face is a portion called the "red zone". Engine r/min (rpm) in the red zone is above maximum recommended engine speed and is also above the range for good performance.

## NOTICE

Engine r/min (rpm) should not be allowed to enter the red zone; operation in the red zone will overstress the engine and may cause serious engine damage.

#### Clock -

To adjust hours and minutes:

Turn the ignition key to "ON".

#### 22 GENERAL INFORMATION

 Push the right button for more than two seconds. Both the hour and minute displays start flashing.



 Push the right button. The hour display only flashes. Push the left button to advance the hours.



 Push the right button. The hour display stops flashing and the minute display starts flashing. Push the left button to advance the minutes.



- Push the right button. Both the hour and minute displays start flashing again.
- Push the left button. The displays stop flashing and the clock starts working.

#### NOTE


O Pushing the left button momentarily advances the hour or minute step by step. Pushing and holding the button advances the hour or minute continuously.

- O The clock works normally by the back -up power while the ignition switch is turned off
- OWhen the battery is disconnected. the clock is reset to 1:00 and starts working again when the battery is connected

## Odometer/Trip Meter AB -

This meter displays the odometer and the trip meter AB.

The odometer and the trip meter AB can be shifted pushing the left button.

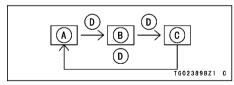

- A. Odometer
- B. Trip Meter A
- C. Trip Meter B
- D. Push Left Button

#### NOTE

ODo not shift the odometer/trip meter while riding for safe operation.

#### Odometer

The odometer shows the total distance in kilometers or miles that the vehicle has been ridden. This meter cannot be reset.



#### **NOTE**

- The data is maintained even if the battery is disconnected.
- O When the figures come to 999999, they are stopped and locked.

## **Trip Meters AB**

The trip meter shows the distance in kilometers or miles traveled since it was last reset to zero.

## To reset the trip meter:

- Push the left button to display the trip meter A or B.
- Push the right button and hold it in.
- After two second, the figure display turns to 0.0, and then starts counting when the vehicle is operated. The meter counts until it is next reset.

#### NOTE

- The data is maintained by the back -up power if the ignition key is turned off.
- When the trip meter is reset while the vehicle is stopped, it starts counting as soon as the vehicle starts moving.
- When the trip meter reaches 9999.9 while riding, the meter resets to 0.0 and continues counting.
- OWhen the battery is disconnected, the meter display resets to 0.0.


## Fuel Gauge -

The fuel in the fuel tank is shown by the number of segments displayed. When the fuel tank is full, all the segments are displayed. As the fuel level in the tank goes down, the segments disappear one by one from F (full) to E (empty). When the lowest segment and fuel level warning symbol flash in

the digital meter, only 2.5 L (0.7 US gal) of fuel remain

Refuel at the earliest opportunity if the most bottom segment of the fuel gauge flashes.

When vehicle stands with Side Stand, Fuel Gauge cannot show the amount of fuel in the fuel tank exactly. Stand upright the vehicle to check the fuel level.

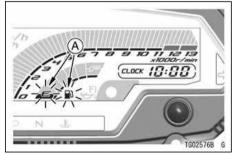

A. Flash

## Warning/Indicator Lights

: When the transmission is in neutral, the neutral indicator light goes on.

D: When the headlight is on high beam, the high beam indicator light goes on.

♦⇒ : When the turn signal switch is pushed to the left or right, the turn signal indicator light flashes.

: The coolant temperature warning indicator light goes on when the ignition key is turned to "ON" and goes off soon after ensuring that its circuit function properly. The coolant temperature warning indicator light also goes on whenever the coolant temperature rises too high when the motorcycle is in operation. If it stays on, stop the engine

and check the coolant level in the reserve tank after the engine cools down.

## **NOTICE**

Do not let the engine continue running when the coolant temperature warning indicator light goes on. Prolonged engine operation will result in severe damage from overheating.

Warning Indicator Light: This warning indicator light in the meter instrument has the two warning functions: oil pressure warning, fuel injection system warning. This warning indicator light flashes with each warning symbols: engine oil pressure warning symbol ( )/fuel injection warning symbol ( ). If the warning indicator light flashes with the engine running,

have its cause checked by an authorized Kawasaki dealer. Refer to the "Warning Symbols" in this section for more detailed information.

## Warning Symbols -

The warning indicator light in the meter instrument and the oil pressure warning symbol ( ) in the digital meter flash whenever the oil pressure is dangerously low or the ignition switch is in the ON position with the engine not running, and go off when the engine oil pressure is high enough. Refer to the Maintenance and Adjustment chapter for more detailed engine oil information.

 ${f FI}$ : The warning indicator light in the meter instrument and the fuel injection warning symbol ( ${f FI}$ ) in the digital meter flash whenever the ignition

key is turned to "ON" or trouble occurs in the fuel injection system. After turning the ignition key to "ON", the fuel injection warning symbol ( FI ) goes off soon after it is ensured that its circuit is functioning properly. If the warning indicator light and warning symbol flash, have the FI system checked by an authorized Kawasaki dealer


## Kev

This motorcycle has a combination kev, which is used for the ignition switch/steering lock, seat lock, and fuel tank cap.

Blank keys are available at your Kawasaki dealers. Ask your dealer to make any additional spare keys you may need, using your original key as a master, or using the key code on the tag with your keys.

Record the code from the tag with your keys here. Participating Kawasaki dealers can use the code to make a new key in the event that your original keys are lost.


#### **28 GENERAL INFORMATION**

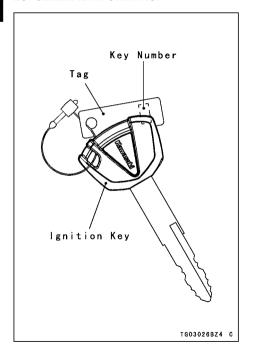

Write your key number here.

## Ignition Switch/Steering Lock

This is a four-position, key-operated switch. The key can be removed from the switch when it is in the OFF, LOCK, or P (Park) position.

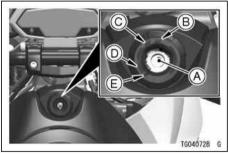

- A. Ignition Switch/Steering Lock
- B. ON Position
- C. OFF Position
- D. LOCK Position
- E. P (Park) Position

OFF	Engine off. All electrical circuits off.	
ON	Engine on. All electrical equipment can be used.	
LOCK	Steering locked. Engine off. All electrical circuits off.	
P (Park)	Steering locked. Engine off. Tail and license plate lights on. All other electrical circuits cut off.	


## NOTICE

When turning the handlebar all the way to the right or left, the space between the handlebar holder and the ignition switch cover becomes very narrow. If an accessory such as a key ring attached to the ignition key is caught in the above narrow space, it could damage ignition switch cover or the related parts. Avoid using a key accessory that may be caught between the handlebar holder and the ignition switch cover.

#### NOTE


 The tail, city and license plate lights are on whenever the ignition key is in the ON position. One headlight

- goes on when the starter button is released after starting the engine. To avoid battery discharge, always start the engine immediately after turning the ignition key to "ON".
- O If you leave the P (Park) position on for a long time (one hour), the battery may become totally discharged.

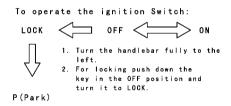

TG04074BZ2 C

## Left Handlebar Switches

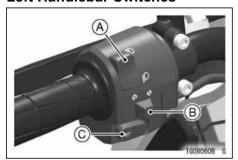

- A. Dimmer Switch **B. Turn Signal Switch**
- C. Horn Button

#### Dimmer Switch

High or low beam can be selected with the dimmer switch. When the headlight is on high beam ( D), the high beam indicator light goes on.

High beam.....( 

□

) Low beam.....( ♪ )

#### NOTE

O When the headlight is on high beam, both headlights go on. When the headlight is on low beam, only one headlight goes on.

## **Turn Signal Switch**


When the turn signal switch is pushed to the left ( \$\dipsi\$ ) or right ( \$ ), the corresponding turn signals flash on and off.

To stop flashing, push the switch in.

#### Horn Button

When the horn button is pushed, the horn sounds.

## **Right Handlebar Switches**

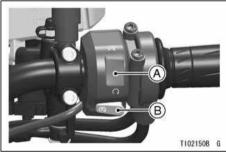

A. Engine Stop Switch B. Starter Button

## **Engine Stop Switch**

In addition to the ignition switch, the engine stop switch must be in the O position for the motorcycle to operate.

The engine stop switch is for emergency use. If some emergency requires stopping the engine, move the engine stop switch to the position.

#### NOTE

O Although the engine stop switch stops the engine, it does not turn off all the electrical circuits. Ordinarily, the ignition switch should be used to stop the engine.


#### Starter Button

The starter button operates the electric starter when the transmission is in neutral.

Refer to the Starting the Engine section of the "How to Ride the Motorcycle" chapter for starting instructions.

## **Brake Lever Adjuster**

There is an adjuster on the brake lever. The adjuster has 6 positions so that the released lever position can be adjusted to suit the operator's hands. Push the lever forward and turn the adjuster to align the number with the mark on the lever holder. The distance from the grip to the released lever is minimum at Number 6 and maximum at Number 1.

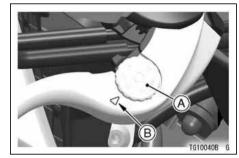

A. Adjuster B Mark


## **Fuel Tank Cap**

To open the fuel tank cap, pull up the key hole cover. Insert the ignition key into the fuel tank cap and turn the key to the right.

To close the cap, push it down into place with the key inserted. The key can be removed by turning it to the left to the original position.

## NOTE

- O The fuel tank cap cannot be closed without the key inserted, and the key cannot be removed unless the cap is locked properly.
- O Do not push on the key to close the cap, or the cap cannot be locked.

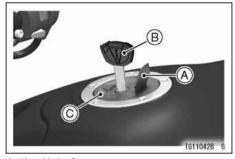


A. Key Hole Cover B. Ignition Key

C. Fuel Tank Cap

#### **Fuel Tank**

The following octane rating gasoline is recommended for the fuel tank. Avoid filling the tank in the rain or where heavy dust is blowing so that the fuel does not get contaminated.

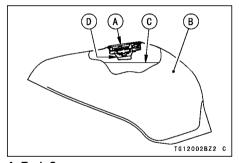

- A. Tank Cap B. Fuel Tank C. Top Level
- D Filler Neck

# **▲** WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. When refueling, servicing fuel system, draining gasoline and/or adjusting the carburetor: Stop engine and allow it to cool before refueling. DO NOT smoke. Make sure the area is well ventilated and free from any source of flame or sparks, including the pilot light of any appliance. DO NOT fill the tank so the fuel level rises into the filler neck or level surface of level gauge. If the tank is overfilled, heat may cause the fuel to expand and overflow through the vents in the tank cap. Wipe off any spilled gasoline immediately.

California model only: Never fill the tank so the fuel level rises into the filler neck. If the tank is overfilled, heat may cause the fuel to expand and flow into the Evaporative Emission Control System resulting in hard starting and engine hesitation and in compliance with the emission regulation.

#### **Fuel Requirement**

### Fuel Type

Use clean, fresh unleaded gasoline with a minimum Antiknock Index of 90. The Antiknock Index is posted on service station pumps. The octane rating

of a gasoline is a measure of its resistance to detonation or "knocking." The Antiknock Index is an average of the Research Octane Number (RON) and the Motor Octane Number (MON) as shown in the table.

Octane Rating Method		Minimum Rating
Antiknock Index	(RON + MON) 2	90

## NOTICE

Use minimum of 90 octane gasoline only to prevent severe engine damage.

If engine "knocking" or "pinging" occurs, use a different brand of gasoline of a higher octane rating. If this condition is allowed to continue it can lead to severe engine damage.

Gasoline quality is important. Fuels of low quality or not meeting standard industry specifications may result in unsatisfactory performance. Operating problems that result from the use of poor quality or nonrecommended fuel may not be covered under your warranty.

## Fuels Containing Oxygenates

Gasoline frequently contains oxygenates (alcohols and ethers) especially in areas of the U.S. and Canada which are required to sell such reformulated fuels as part of a strategy to reduce exhaust emissions

The types and volume of fuel oxygenates approved for use in unleaded gasoline by the U.S. Environmental Protection Agency include a broad range of alcohols and ethers, but only two components have seen any significant level of commercial use.

Gasoline/Alcohol Blends - Gasoline containing up to 10% ethanol (alcohol produced from agricultural products such as corn), also known as "gasohol" is approved for use.

Avoid using blends of unleaded gasoline and methanol (wood alcohol) whenever possible, and never use "gasohol" containing more than 5% methanol. Fuel system damage and performance problems may result.

Gasoline/Ether Blends - The most common ether is methyl tertiary butyl ether (MTBE). You may use gasoline containing up to 15 % MTBE.

#### NOTE

Other oxygenates approved for use in unleaded gasoline include TAME (up to 16.7 %) and ETBE (up to 17.2 %). Fuel containing these oxygenates can also be used in your Kawasaki.

### NOTICE

Never use gasoline with an octane rating lower than the minimum specified by Kawasaki.

Never use "gasohol" with more than 10% ethanol, or more than 5% methanol. Gasoline containing methanol must also be blended with cosolvents and corrosion inhibitors.


Certain ingredients of gasoline may cause paint fading or damage. Be extra careful not to spill gasoline or gasoline oxygenate blends during refueling.

When not operating your Kawasaki for 30 to 60 days, mix a fuel stabilizer (such as STA-BIL) with the gasoline in the fuel tank. Fuel stabilizer additives inhibit oxidation of the fuel which minimizes gummy deposits.

Never store this product with "gasohol" in the fuel system. Before storage it is recommended that you drain all fuel from the fuel system. See the Storage section in this manual.

#### Side Stand

The motorcycle is equipped with a side stand.

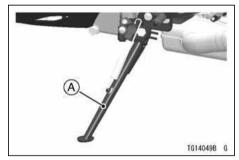

A. Side Stand

#### NOTE

OWhen using the side stand, turn the handlebar to the left.

Whenever the side stand is used. make it a practice to kick the stand fully up before sitting on the motorcycle.

#### NOTE

O The motorcycle is equipped with a side stand switch. This switch is designed so that the engine does not start if the transmission is in gear and the side stand is down.


#### Seats

### Passenger's Seat Removal

 Remove the passenger's seat by inserting the ignition key into the seat lock, and turning it clockwise.

# **A** WARNING


The muffler quickly becomes very hot soon after the engine is started and can cause serious burns. To avoid burns, be careful not to touch the muffler when operating the seat lock.

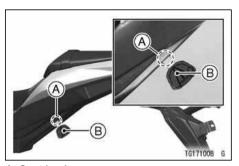

A. Seat Lock B. Ignition key

#### NOTE

O When removing the passenger's seat, pull it up while turning the key.

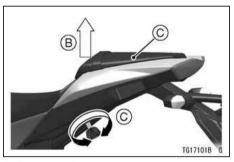


- A. Passenger's seat
- B. Pull up
- C. Turn the Key

#### 42 GENERAL INFORMATION

#### Rider's Seat Removal


 Remove the bolts and pull off the seat upward

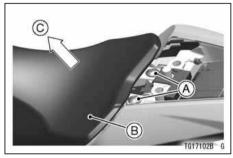

- A. Bolts
- B. Rider's Seat
- C. Pull up

#### Rider's Seat Installation

- Insert the tabs on the front of the rider's seat into the slots in the frame.
- Insert the projections on the rear of the rider's seat into the holes on the frame and tighten the bolts.

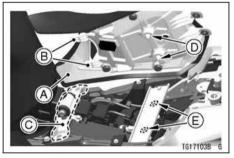


- A. Rider's Seat
- B. Tads
- C. Slots
- D. Projections
- E. Holes

### Passenger's Seat Installation

- Insert the tab on the rear of the passenger's seat into the slot in the frame
- Insert the projections at the front of the passenger's seat into the holes on the frame

 Push down the front part of the passenger's seat until the lock clicks.

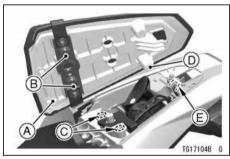


- A. Passenger's seat
- **B. Projections**
- C. Holes
- D. Tab
- E. Slot
- Pull up the front and rear ends of the passenger's and rider's seats to make sure they are securely locked.

#### 44 GENERAL INFORMATION

#### **Tool Kit**

The tool kit is located under the passenger's seat.

The kit contains tools that are helpful in making roadside repairs, adjustments, and some maintenance procedures explained in this manual. Keep the tool kit in the original place.

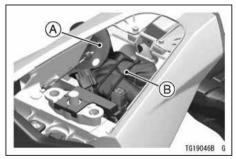

A. Tool Kit B. Band

#### Air Cleaner Intake

The air cleaner intake allows air to enter the fuel system. Never allow anything to restrict the flow of air into the air cleaner. A restricted air cleaner will reduce performance and increase exhaust emissions.




A. Air Cleaner Intake

## **Meter Unit Mounting Angle**

The meter unit can be adjusted its mounting angle from 3 positions depending on the view of a rider.

### Adjustment

- Hold the meter unit by the hand.
- Adjust the meter unit mounting angle while pulling the knob located the left side of the meter unit

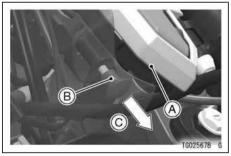

- A. Meter unit
- B. Knob
- C. Pull

- Insert the pin of the knob into the hole of the meter unit bracket to fix the meter unit
- Be sure the meter unit is fixed securely.

#### NOTE

O The initial position of the meter unit mounting angle is a top hole.

# **▲** WARNING


Removing your hands from the handlebars while riding can create an unsafe riding condition and potential for a crash resulting in serious injury or death. Do not adjust the angle of the meter unit while riding; only make this adjustment when stopped in a safe area away from traffic.

#### **46 GENERAL INFORMATION**

#### **Rear View Mirror**

#### Rear View Mirror Adjustment

- Adjust the rear view mirror by slightly moving only the mirror portion of the assembly.
- If the rear visibility can not be assured by moving the mirror, turn the stay by hand.

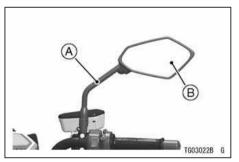

A. Stay

B. Rear View Mirror

#### **BREAK-IN**

The first 1 600 km (1 000 miles) that the motorcycle is ridden is designated as the break-in period. If the motorcycle is not used carefully during this period, you may very well end up with a "broken down" instead of a "broken in" motorcycle after a few thousand kilometers.

The following rules should be observed during the break-in period.

The table shows maximum recommended engine speed during the break-in period.

Distance traveled	Maximum engine speed
0 ~ 800 km (0 ~ 500 miles)	4 000 r/min (rpm)
800 ~ 1 600 km (500 ~ 1 000 miles)	6 000 r/min (rpm)

- Do not start moving or race the engine immediately after starting it, even if the
  engine is already warm. Run the engine for two or three minutes at idle speed to
  give the oil a chance to work up into all the engine parts.
- Do not race the engine while the transmission is in neutral.

# **▲** WARNING


New tires are slippery and may cause loss of control and injury. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking and acceleration, and hard cornering.

In addition to the above, at 1 000 km (600 miles) it is extremely important that the owner has the initial maintenance service performed by a competent mechanic following the procedures in the Service Manual.

#### **HOW TO RIDE THE MOTORCYCLE**


### Starting the Engine

• Check that the engine stop switch is o position. in the

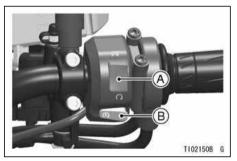

A. Engine Stop Switch B. Starter Button

- Turn the ignition key to "ON".
- Make sure the transmission is in neutral.

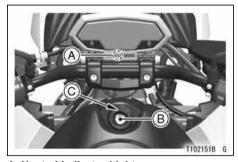

A. Neutral Indicator Light

- **B.** Ignition Switch
- C. ON Position

#### NOTE


- O The motorcycle is equipped with a vehicle-down sensor, which causes the engine to stop automatically and the fuel injection warning symbol to flash when the motorcycle falls down and the starter button pushed in. After righting the motorcycle, first turn the ignition key to "OFF" and then back to "ON" for a few seconds before starting the engine.
- After the meter operation check, leaving the throttle completely closed, push the starter button.

## **NOTICE**

Do not operate the starter continuously for more than 5 seconds, or the starter will overheat and the battery power will drop temporarily. Wait 15 seconds between each operation of the starter to let it cool and the battery power recover.

#### **NOTE**

O The motorcycle is equipped with a starter lockout switch. This switch is designed so that the engine does not start if the transmission is in gear and the side stand is down. However, the engine can be started if the clutch lever is pulled and the side stand is fully up.

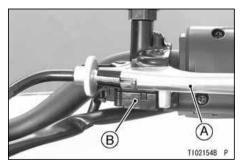

A. Clutch Lever
B. Starter Lockout Switch

### **NOTICE**

Do not let the engine idle longer than five minutes, or engine overheating and damage may occur.

## **Jump Starting**

If your motorcycle battery is "run down", it should be removed and charged. If this is not practical, a 12 volt booster battery and jumper cables may be used to start the engine.


# **A** DANGER

Battery acid generates hydrogen gas which is flammable and explosive under certain conditions. It is present within a battery at all times, even in a discharged condition. Keep all flames and sparks (cigarettes) away from the battery. Wear eye protection when working with a battery. In the event of battery acid contact with skin, eyes, or clothing, wash the affected areas immediately with water for at least 5 minutes. Seek medical attention.

### Connecting Jumper Cables

 Remove the rider's seat (see Seats section in the GENERAL INFORMA-TION chapter).

- Make sure the ignition key is turned to "OFF".
- Connect a jumper cable from the positive (+) terminal of the booster battery to the positive (+) terminal of the motorcycle battery.

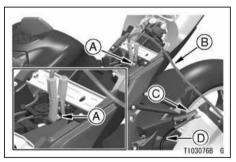

- A. Motorcycle Battery Positive (+) Terminal
- B. From Booster Battery Positive (+) Terminal
- C. Footpeg
- D. From Booster Battery Negative (–)
  Terminal

 Connect another jumper cable from the negative (-) terminal of the booster battery to your motorcycle footpeg or other unpainted metal surface. Do not use the negative (-) terminal of the battery.

# **A** DANGER

Batteries contain sulfuric acid that can cause burns and produce hydrogen gas which is highly explosive. Do not make this last connection at the fuel system or battery. Take care not to touch the positive and negative cables together, and do not lean over the battery when making this last connection. Do not connect to a frozen battery. It could explode. Do not reverse polarity by connecting positive (+) to negative (-), or a battery explosion and serious damage to the electrical system may occur.

• Follow the standard engine starting procedure.


## **NOTICE**

Do not operate the starter continuously for more than 5 seconds or the starter will overheat and the battery power will drop temporarily. Wait 15 seconds between each operation of the starter to let it cool and the battery power recover.

- After the engine has started, disconnect the jumper cables. Disconnect the negative (–) cable from the motorcycle first.
- Reinstall the removed parts.

## **Moving Off**

- Check that the side stand is up.
- Pull in the clutch lever.
- Shift into 1st gear.
- Open the throttle a little, and start to let out the clutch lever very slowly.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough fuel to keep it from stalling.

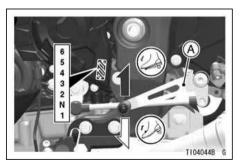

A. Shift Pedal

#### NOTE

- O The motorcycle is equipped with a side stand switch. This switch is designed so that the engine does not start if the transmission is in gear and the side stand is down.
- OWhen the headlight is on high beam, two headlight beams go on, and on low beam, the one side of the headlight goes on.

## **Shifting Gears**

- Close the throttle while pulling in the clutch lever.
- Shift into the next higher or lower gear.
- Open the throttle part way, while releasing the clutch lever.
- For smooth riding, each gear position should cover the proper rate of speed shown in the table.

# **A** WARNING

Downshifting to a lower gear at high speed causes engine rpm to increase excessively, potentially damaging the engine and it may also cause the rear wheel to skid and cause an accident. Downshifting should be done below the vehicle speeds for each gear shown in the table.

#### Vehicle speed when shifting

Shifting up	km/h (mph)	Shifting down	km/h (mph)
1st → 2nd	15 ( 9)	6th → 5th	30 (19)
2nd → 3rd	25 (15)	5th → 4th	25 (15)
3rd → 4th	35 (21)	4th → 3rd	20 (12)
4th → 5th	45 (27)	3rd → 2nd	15 ( 9)
5th → 6th	55 (34)	2nd → 1st	15 ( 9)


#### NOTE

O The transmission is equipped with a positive neutral finder. When the motorcycle is standing still, the transmission cannot be shifted past neutral from 1st gear. To use the positive neutral finder, shift down to 1st gear, then lift up on the shift pedal while standing still. The transmission will shift only into neutral.


## **Braking**

- Close the throttle completely, leaving the clutch engaged (except when shifting gears) so that the engine will help slow down the motorcycle.
- Shift down one gear at a time so that you are in 1st gear when you come to a complete stop.
- When stopping, always apply both brakes at the same time. Normally the front brake should be applied a little more than the rear. Shift down or fully disengage the clutch as necessary to keep the engine from stalling.
- Never lock the brakes, or it will cause the tires to skid. When turning a corner, it is better not to brake at all. Reduce your speed before you get into the corner.

 For emergency braking, disregard downshifting, and concentrate on applying the brakes as hard as possible without skidding.

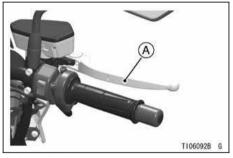

A. Front Brake Lever

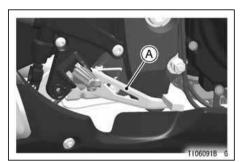

A Rear Brake Pedal

## Stopping the Engine

- Close the throttle completely.
- Shift the transmission into neutral
- Turn the ignition key to "OFF".
- Support the motorcycle on a firm, level surface with the side stand.
- Lock the steering.

#### NOTE

OThe motorcycle is equipped with a vehicle-down sensor, which causes the engine to stop automatically and the fuel injection warning symbol to flash when the motorcycle falls down and the starter button is pushed in. After righting the motorcycle, first turn the ignition key to "OFF" and then back to "ON" for a few seconds before starting the engine.

## Stopping the Motorcycle in an Emergency

Your Kawasaki Motorcycle has been designed and manufactured to provide you optimum safety and convenience. However, in order to fully benefit from Kawasaki's safety engineering and craftsmanship, it is essential that you, the owner and operator, properly maintain your motorcycle and become thoroughly familiar with its operation. Improper maintenance can create a dangerous situation known as throttle failure. Two of the most common causes of throttle failure are:

 An improperly serviced or clogged air cleaner may allow dirt and dust to enter the throttle body and stick the throttle open. During removal of the air cleaner, dirt is allowed to enter and jam the fuel injection system.

In an emergency situation such as throttle failure, your vehicle may be stopped by applying the brakes and disengaging the clutch. Once this stopping procedure is initiated, the engine stop switch may be used to stop the engine. If the engine stop switch is used, turn off the ignition switch after stopping the motorcycle.

## **Parking**

- Shift the transmission into neutral and turn the ignition key to "OFF".
- Support the motorcycle on a firm, level surface with the side stand.

## NOTICE

Do not park on a soft or steeply inclined surface, or the motorcycle may fall over.

 If parking inside a garage or other structure, be sure it is well ventilated and the motorcycle is not close to any source of flame or sparks; this includes any appliance with a pilot light.

# **WARNING**

The muffler and exhaust pipe are very hot while the engine is running and just after the engine stops. This can ignite a fire, resulting in property damage or severe personal injury.

Do not idle or park your vehicle in an area where flammable materials such as grasses or dry leaves may contact with muffler or exhaust pipe.

# **A** WARNING

Gasoline is extremely flammable and can be explosive under certain conditions, creating the potential for serious burns. Turn the ignition switch to "OFF". Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Never fill the tank completely to the top. If the tank is filled completely to the top, heat may cause the fuel to expand and overflow through the vents in the tank cap. After refueling, make sure the tank cap is closed securely.

If gasoline is spilled on the fuel tank, wipe it off immediately.

• Lock the steering to prevent theft.

#### NOTE

- O When stopping near traffic at night, you can leave the taillight on for greater visibility by turning the ignition key to the P (park) position.
- O Do not leave the ignition switch at P position too long, or the battery will discharge.

## Catalytic Converter

This motorcycle is equipped with a catalytic converter in the exhaust system. Platinum and rhodium in the converter react with carbon monoxide, hydrocarbons and nitrogen oxides to convert them into carbon dioxide. water, nitrogen and oxygen resulting in much cleaner exhaust gases to be discharged into the atmosphere.

For proper operation of the catalytic converter, the following cautions must he observed

# **▲** WARNING

The muffler and exhaust pipe are very hot while the engine is running and just after the engine stops. This can ignite a fire, resulting in property damage or severe personal injury.

Do not idle or park your vehicle in an area where flammable materials such as grasses or dry leaves may contact with muffler or exhaust pipe.

- Use only unleaded gasoline. Never use leaded gasoline. Leaded gasoline significantly reduces the capability of the catalytic converter.
- Do not operate the vehicle with the engine of any one cylinder misfiring. Under these conditions unburned air/fuel mixture flowing out of engine excessively accelerates reaction in

#### 64 HOW TO RIDE THE MOTORCYCLE

the converter allowing the converter to overheat and become damaged when the engine is hot, or reduces converter performance when the engine is cold.

### SAFE OPERATION

## Safe Riding Technique

The points given below are applicable for everyday motorcycle use and should be carefully observed for safe and effective vehicle operation.

For safety, eye protection and a helmet are strongly recommended. You should be aware of and verify the applicable safety regulations in force prior to riding your motorcycle. Gloves and suitable footwear should also be used for added protection in case of a mishap.

A motorcycle does not provide the impact protection of an automobile, so defensive riding in addition to wearing protective apparel is extremely important. Do not let protective apparel give you a false sense of security. When riding always keep both hands on the handlebars and both feet on the footpegs. Removing your hands from the handlebars or feet from the footpegs while riding can be hazardous. If you remove even one hand or foot, you can reduce your ability to control the motorcycle.

Before changing lanes, look over your shoulder to make sure the way is clear. Do not rely solely on the rear view mirror; you may misjudge a vehicle's distance and speed, or you may not see it at all. In general your actions should be smooth as sudden acceleration, braking or turning may cause loss of control, especially when riding in wet conditions or on loose roadway surfaces, when the ability to maneuver will be reduced.

When going up steep slopes, shift to a lower gear so that there is plenty of power to spare rather than overloading the engine.

When applying the brakes, use both the front and rear brakes. Applying only one brake for sudden braking may cause the motorcycle to skid and lose control.

When going down long slopes, control vehicle speed by closing the throttle. Use the front and rear brakes for auxiliary braking.

In wet conditions, rely more on the throttle to control vehicle speed and less on the front and rear brakes. The throttle should also be used judiciously to avoid skidding the rear wheel from too rapid acceleration or deceleration.

Riding at the proper rate of speed and avoiding unnecessarily fast acceleration are important not only for safety and low fuel consumption but also for long vehicle life and quieter operation.

On rough roads, exercise caution, slow down, and grip the fuel tank with knees for better stability.

When quick acceleration is necessary as in passing, shift to a lower gear to obtain the necessary power.

Do not downshift at too high an r/min (rpm) to avoid damage from overrevving to the engine.

Avoiding unnecessary weaving is important to the safety of both the rider and other motorists.

## **Daily Safety Checks**

Check the following items each day before you ride. The time required is minimal, and habitual performance of these checks will help ensure you a safe, reliable ride.

If any irregularities are found during these checks, refer to the Maintenance and Adjustment chapter or see your dealer for the action required to return the motorcycle to a safe operating condition.

# **▲** WARNING

Failure to perform these checks before operation may result in serious damage or an accident. Always perform daily safety checks before operation.

## **A** DANGER

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas.

Inhaling carbon monoxide can cause serious brain injury or death. Do not run the engine in enclosed areas. Operate only in a well-ventilated area.

Fuel ....... Adequate supply in tank, no leaks. Engine Oil ...... Oil level between level lines.

Tires Air pressure (when cold):				
	Front	250 kPa (2.50 kgf/cm², 36 psi)		
	Rear	290 kPa (2.90 kgf/cm², 42 psi)		
Drive Chain	Install the air valve cap. Slack 20 ~ 30 mm (0.8 ~ 1.2 in.). Lubricate when chain is dry.			
Nuts, Bolts, Fasteners	Check that steering and suspension components, axles, and all controls are properly tightened or fastened.			
Steering	Action smooth but not loose from lock to lock. No binding of control cables. Steering Damper Unit: No oil leakage.			
Brakes	Brake pad wear: Lining thickness more than 1 mm (0.04 in.) left.  No brake fluid leakage.			
Throttle	Throttle grip play $2 \sim 3$ mm (0.08 $\sim$ 0.12 in.).			
Clutch		lay $2 \sim 3$ mm (0.08 $\sim$ 0.12 in.). perates smoothly.		
Coolant	No coolant lea			
Electrical Equipment	All lights (Hea	dlight, Tail/Brake Lights, Turn Signal Lights, Light, Warning/Indicator Lights) and horn		

#### **70 SAFE OPERATION**

Engine Stop Switch .... Stops engine.

Side Stand ...... Return to its fully up position by spring tension.

Return spring not weak or not damaged.

Refer to the "Daily Safety Checks" caution label attached to the back of left side cover.

# **Additional Considerations for High Speed Operation**

Brakes: The importance of the brakes, especially during high speed operation, cannot be overemphasized. Check to see that they are correctly adjusted and functioning properly.

Steering: Looseness in the steering can cause loss of control. Check to see that the handlebar turns freely but has no play.

Tires: High speed operation is hard on tires, and good tires are crucial for riding safety. Examine their overall condition, inflate them to the proper pressure, and check the wheel balance.

Fuel: Have sufficient fuel for the high fuel consumption during high speed operation.

Engine Oil: To avoid engine seizure and resulting loss of control, make sure that the oil level is at the upper level line.

Coolant: To avoid overheating, check that the coolant level is at the upper level line.

Electrical Equipment: Make sure that the headlight, tail/brake light, turn signal lights, license plate light horn, etc., all work properly.

Miscellaneous: Make sure that all nuts and bolts are tight and that all safety related parts are in good condition.

# **A** WARNING

Handling characteristics of a motorcycle at high speeds may vary from those you are familiar with at legal highway speeds. Do not attempt high speed operation unless you have received sufficient training and have the required skills.

The maintenance and adjustments outlined in this chapter must be carried out in accordance with the Periodic Maintenance Chart to keep the motorcycle in good running condition. The initial maintenance is vitally important and must not be nealected.

With a basic knowledge of mechanics and the proper use of tools, you should be able to carry out many of the maintenance items described in this chapter. If you lack proper experience or doubt your ability, all adjustments, maintenance, and repair work should be completed by a qualified technician.

Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect or improper adjustment done by the owner.

### **EMISSION CONTROL INFORMATION**

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board. Additionally, Kawasaki has incorporated an evaporative emission control system (3) in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board.

# 1. Crankcase Emission Control System

This system eliminates the release of crankcase vapors into the atmosphere. Instead, the vapors are routed through an oil separator to the intake side of the engine. While the engine is operating, the vapors are drawn into the combustion chamber, where they are burned along with the fuel and air supplied by the fuel injection system.

## 2. Exhaust Emission Control System

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel, ignition and exhaust systems of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels. The exhaust system of this model motorcycle includes a catalytic converter system.

# 3. Evaporative Emission Control System

The evaporative emission control system for this vehicle consists of low permeation fuel hoses and fuel tank.

# 3. Evaporative Emission Control System (California)

Vapors caused by fuel evaporation in the fuel system are not vented into the atmosphere. Instead, fuel vapors are routed into the running engine to be burned, or stored in a canister when the engine is stopped. Liquid fuel is caught by a vapor separator and returned to the fuel tank.

# High Altitude Performance Adjustment Information

High Altitude adjustment is not required.

#### MAINTENANCE AND WARRANTY

Proper maintenance is necessary to ensure that your motorcycle will continue to have low emission levels. This Owner's Manual contains those maintenance recommendations for your motorcycle. Those items identified by the Periodic Maintenance Chart are necessary to ensure compliance with the applicable standards.

As the owner of this motorcycle, you have the responsibility to make sure that the recommended maintenance is carried out according to the instructions in this Owner's Manual at your own expense.

The Kawasaki Limited Emission Control System Warranty requires that you return your motorcycle to an authorized Kawasaki dealer for remedy under warranty. Please read the warranty carefully, and keep it valid by complying with the owner's obligations it contains.

You should keep a maintenance record for your motorcycle. To assist you in keeping this record, we have provided space on pages 170 through 173 of this manual where an authorized Kawasaki dealer, or someone equally competent, can record the maintenance. You should also retain copies of maintenance work orders, bills, etc., as verification of this maintenance.

# TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Federal law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- \* Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- \* Removal of the muffler(s) or any internal portion of the muffler(s).
- \* Removal of the air box or air box cover.
- \* Modifications to the muffler(s) or air intake system by cutting, drilling, or other means if such modifications result in increased noise levels.

### **Periodic Maintenance Chart**

- K: Should be serviced by an authorized Kawasaki dealer.
- \*: For higher odometer readings, repeat at the frequency interval established here.
- #: Service more frequently when operating in severe conditions: dusty, wet, muddy, high speed, or frequent starting/stopping.

Frequency	Whiche comes first	ver	*Odometer Reading km × 1 000 (mile × 1 000)						See Page
Operation (Engine Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Valve clearance - inspect						•			103
Throttle control system (play, smooth return, no drag) - inspect	year	•		•		•		•	107
Engine vacuum synchronization - inspect				•		•		•	110

	Frequency	Whiche comes first	ver	*Odometer Reading km × 1 000 (mile × 1 000)					See Page	
	Operation (Engine Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
	Idle speed - inspect		•		•		•		•	110
K	Fuel leak (fuel hose and pipe) - inspect	year	•		•		•		•	-
K	Fuel hoses damage - inspect	year	•		•		•		•	_
K	Fuel hoses installation condition - inspect	year	•		•		•		•	_
	Coolant level - inspect		•		•		•		•	98
	Coolant leak - inspect	year	•		•		•		•	96
	Radiator hoses damage - inspect	year	•		•		•		•	96

Frequency	Whiche comes first	Oudineter Reading				*Odometer Re				
Operation (Engine Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)		
Radiator hoses installation condition - inspect	year	•		•		•		•	96	
Evaporative emission control system - function (California model only)		•	•	•	•	•	•	•	102	
Air suction system damage - inspect				•		•		•	104	

2. Periodic Inspection (Chassis Related Items)

z. i chicale inopection	1011400			····• <i>/</i>					
Frequency		comes *Odometer Reading							See Page
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Clutch and drive train	:						-		
Clutch operation (play, engagement, disengagement) - inspect		•		•		•		•	112
Drive chain lubrication condition - inspect #			every	600	km (400	mile)			122
Drive chain slack - inspect #	every 1 000 km (600 mile)						116		
Drive chain wear - inspect #				•		•		•	120

	Frequency	Whichever comes  first  km × 1 000 (mile × 1 000)							U	See Page
	Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
K	Drive chain guide wear - inspect				•		•		•	_
W	heels and tires:									
	Tire air pressure - inspect	year			•		•		•	138
	Wheels/tires damage - inspect				•		•		•	139
	Tire tread wear, abnormal wear - inspect				•		•		•	139
K	Wheel bearings damage - inspect	year			•		•		•	_

Frequency	Whiche comes first		*Odometer Reading km × 1 000 (mile × 1 000)						
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Brake system:	-				-		-		
Brake fluid leak - inspect	year	•	•	•	•	•	•	•	124
Brake hoses damage - inspect	year	•	•	•	•	•	•	•	124
Brake pad wear - inspect #			•	•	•	•	•	•	124
Brake hoses installation condition - inspect	year	•	•	•	•	•	•	•	124
Brake fluid level - inspect	6 months	•	•	•	•	•	•	•	125

Frequency		Whichever comes *Odometer Reading first → km × 1 000 (mile × 1 000)							See Page
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Brake operation (effectiveness, play, drag) - inspect	year	•	•	•	•	•	•	•	127
Brake light switch operation - inspect		•	•	•	•	•	•	•	128
Suspensions:									
Front forks/rear shock absorber operation (damping and smooth stroke) - inspect				•		•		•	130/ 134
Front forks/rear shock absorber oil leak - inspect	year			•		•		•	130/ 134

	Frequency	Whichever comes *Odometer Reading first ★ km × 1 000 (mile × 1 000)						See Page		
	Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
K	Uni-trak rocker arm operation - inspect				•		•		•	I
K	Uni-trak tie rods operation - inspect				•		•		•	I
Sto	eering system:				-			•		
K	Steering play - inspect	year	•		•		•		•	ı
K	Steering stem bearings - lubricate	2 years					•			ı
Ele	ectrical system:									
	Lights and switches operation - inspect	year			•		•		•	

Frequency	Whiche comes first				km ×		meter Re (mile ×	_	See Page
Operation (Chassis Items)	Every	1 (0.6)	6 (3.75)	12 (7.5)	18 (11.25)	24 (15)	30 (18.75)	36 (22.5)	
Headlight aiming - inspect	year			•		•		•	148
Side stand switch operation - inspect	year			•		•		•	-
Engine stop switch operation - inspect	year			•		•		•	-
Chassis:									
Chassis parts - lubricate	year			•		•		•	152
Bolts and nuts tightness - inspect		•		•		•		•	159

3. Periodic Replacement

	Frequency	Whichever comes first	<b>→</b>	*Odometer Reading km × 1 000 (mile × 1 000)		See Page		
	Change/Replacement Items	Every	1 (0.6)	12 (7.5)	24 (15)	36 (22.5)	48 (30)	3
/	Air cleaner element # - replace	every	18 00	0 km (′	11 250	mile)		106
i	Engine oil # - change	year	•	•	•	•	•	92
	Oil filter - replace	year	•	•	•	•	•	92
K	Fuel hoses - replace	4 years					•	_
K	Coolant - change	3 years				•		100
l n	Radiator hoses and O-rings - replace	3 years				•		-
K	Brake hoses - replace	4 years					•	
ı n	Brake fluid (front and rear) - change	2 years			•		•	127

Frequency	Whichever comes first	<b>→</b>	See Page				
Change/Replacement Items	Every	1 (0.6)	12 (7.5)	24 (15)	36 (22.5)	48 (30)	90
K Rubber parts of master cylinder and caliper - replace	4 years					•	-
Spark plug - replace			•	•	•	•	101

# **Engine Oil**

In order for the engine, transmission, and clutch to function properly, maintain the engine oil at the proper level, and change the oil and replace the oil filter in accordance with the Periodic Maintenance Chart. Not only do dirt and metal particles collect in the oil, but the oil itself loses its lubricative quality if used too long.

# **▲** WARNING

Motorcycle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine or transmission seizure, accident, and injury. Check the oil level before each ride and change the oil according to the periodic maintenance chart in the Owner's Manual.

### Oil Level Inspection


• If the oil has just been changed, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Stop the engine, then wait several minutes until the oil settles

# **NOTICE**

Racing the engine before the oil reaches every part can cause engine seizure.

 If the motorcycle has just been used, wait several minutes for all the oil to drain down

 Check the engine oil level through the oil level gauge. With the motorcycle held level, the oil level should come up between the upper and lower level lines next to the gauge.

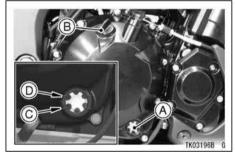


- A. Oil Level Inspection Window
- B. Oil Filler Cap
- C. Lower Level Line
- D. Upper Level Line

- If the oil level is too high, remove the excess oil through the oil filler opening using a syringe or some other suitable device.
- If the oil level is too low, add the oil to reach the correct level. Use the same type and brand of oil that is already in the engine.

# NOTICE

If the engine oil gets extremely low or if the oil pump does not function properly or oil passages are clogged, the warning indicator light in the meter instrument and oil pressure warning symbol in the digital meter will flash. If they flash on when the engine speed is above idle. stop the engine immediately and have it serviced. Failure to do so could cause serious engine damage.

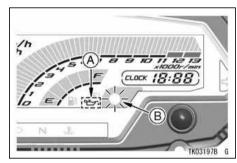

A. Oil Pressure Warning Symbol

**B. Warning Indicator Light** 

### Oil and/or Oil Filter Change

- Warm up the engine thoroughly, and then stop it.
- Place an oil pan beneath the engine.
- Remove the engine oil drain bolt.



A. Engine Oil Drain Bolt

 Let the oil completely drain with the motorcycle perpendicular to the ground.

# **A** WARNING

Motor oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

If the oil filter is to be replaced, remove the oil filter cartridge and replace it with a new one.


#### **NOTE**

Olf a torque wrench or required Kawasaki special tool is not available, this item should be serviced by a Kawasaki dealer.



A. Oil Filter

 Apply a thin film of oil to the packing and tighten the cartridge to the specified torque.

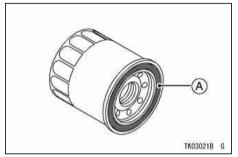

#### A. Packing

• Install the drain bolt with a new gasket. Tighten it to the specified torque.

#### NOTE

O Replace any gaskets with new ones.

# **Tightening Torque**

Engine Oil Drain Bolt:

30 N·m (3.1 kgf·m, 22 ft·lb)

Oil Filter:

17 N·m (1.7 kgf·m, 13 ft·lb)

# Recommended Engine Oil

Type:

API SG, SH, SJ, SL or SM with JASO MA, MA1 or MA2

Viscosity:

SAE10W-40

## **NOTE**

ODo not add any chemical additive to the oil. Oils fulfilling the above requirements are fully formulated and provide adequate lubrication for both the engine and the clutch.

### **Engine Oil Capacity**

Capacity:

3.2 L (3.4 US qt)

(when filter is not removed)


3.8 L (4.0 US qt)

(when filter is removed)

4.0 L (4.2 US qt)

(when engine is completely dry)

Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

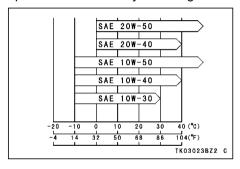

# Cooling System

# Radiator and Cooling Fan -

Check the radiator fins for obstruction by insects or mud. Clean off any obstructions with a stream of low-pressure water.

# **▲** WARNING

The cooling fan spins at high speed and can cause serious injuries. Keep your hands and clothing away from the cooling fan blades at all times.

# NOTICE

Using high-pressure water, as from a car wash facility, could damage the radiator fins and impair the radiator's effectiveness. Do not obstruct or deflect airflow through the radiator by installing unauthorized accessories in front of the radiator or behind the cooling fan. Interference with the radiator airflow can lead to overheating and consequent engine damage.

### Radiator Hoses -

Check the radiator hoses for leakage, cracks or deterioration, and connections for leakage, or looseness each day before riding the motorcycle, and carry out the maintenance and adjustments in accordance with the Periodic Maintenance Chart.

#### Coolant -

Coolant absorbs excessive heat from the engine and transfers it to the air at the radiator. If the coolant level becomes low, the engine overheats and may suffer severe damage. Check the coolant level each day before riding the motorcycle, also carry out the maintenance and adjustments in accordance with the periodic maintenance chart. Replenish coolant if the level is low. Change the coolant in accordance with the Periodic Maintenance Chart.

### Information for Coolant

To protect the cooling system (consisting of the aluminum engine and radiator) from rust and corrosion, the use of corrosion and rust inhibitor chemicals in the coolant is essential. If coolant containing corrosion and rust inhibitor chemicals are not used, over a period of time, the cooling system

accumulates rust and scale in the water jacket and radiator. This will cloq up the coolant passages, and considerably reduce the efficiency of the cooling system.

# **▲** WARNING

Coolant containing corrosion inhitors for alminum engines and radiators include harmful chemicals for human body. Drinking coolant can result in serious injury or death. coolant in accordance with the instractions of the manufacturer.

Soft or distilled water must be used with the antifreeze (see below for antifreeze) in the cooling system.

# **NOTICE**

If hard water is used in the system. it causes scale accumulation in the water passages, and considerably reduces the efficiency of the cooling system.

If the lowest ambient temperature encountered falls below the freezing point of water, use permanent antifreeze in the coolant to protect the cooling system against engine and radiator freeze -up, as well as from rust and corrosion.

Use a permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) in the cooling system. On the mixture ratio of coolant, choose the suitable one referring to the relation between freezing point and strength directed on the container

Permanent types of antifreeze on the market have anti-corrosion and anti-rust properties. When it is diluted excessively, it loses its anti-corrosion property. Dilute a permanent type of antifreeze in accordance with the instructions of the manufacturer.

### **NOTE**

O A permanent type of antifreeze is installed in the cooling system when shipped. It is colored green and contains ethylene glycol. It is mixed at 50% and has the freezing point of -35°C (-31°F).


## Coolant Level Inspection

• Situate the motorcycle so that it is perpendicular to the ground.

 Check the coolant level if it is between the F (Full) and L (Low) level lines.

#### NOTE

 Check the level when the engine is cold (room or atmospheric temperature).

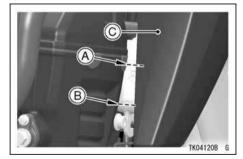


- A. F (Full) Level Line
- B. L (Low) Level Line
- C. Right Side Cover

 If the amount of coolant is insufficient, remove the right fairing and add coolant into the reserve tank.


# Coolant Filling

 Remove the right fairing by removing the bolts.

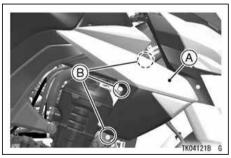

A. Right Fairing B. Bolts


- Disconnect the turn signal light connector
- Remove the cap from the reserve tank and add coolant through the filler opening to the F (Full) level line.

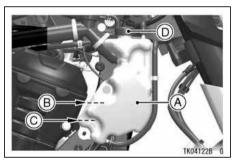

A. Reserve Tank

- B. F (Full) Level Line
- C. L (Low) Level Line
- D. Cap

- Install the cap.
- Connect the turn signal light connector.
- Fit the projections of the cover into the holes of the frame side.
- Tighten the bolts.

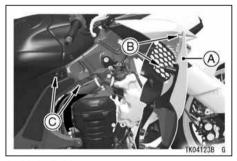

- A. Right Fairing
- B. Projections
- C. Holes

#### NOTE

OIn an emergency you can add water alone to the coolant reserve tank, however it must be returned to the correct mixture ratio by the addition of antifreeze concentrate as soon as possible.

# **NOTICE**

If coolant must be added often, or the reserve tank completely runs dry, there is probably leakage in the system. Have the cooling system inspected by your authorized Kawasaki dealer.

# Coolant Change

Have the coolant changed by an authorized Kawasaki dealer.


# **Spark Plugs**

The standard spark plug is shown in the table. The spark plugs should be replaced in accordance with the Periodic Maintenance Chart.

Spark plug removal should be done only by a competent mechanic following the instructions in the Service Manual.

### Spark Plug

Standard Plug	NGK CR9EIA-9
Plug Gap	0.8 ~ 0.9 mm (0.032 ~ 0.036 in.)
Tightening Torque	13 N·m (1.3 kgf·m, 115 in·lb)

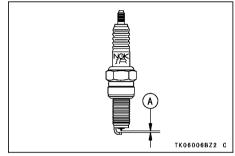


A. 0.8 ~ 0.9 mm (0.032 ~ 0.036 in.)

# Evaporative Emission Control System (California model only)

This system routes fuel vapors from the fuel system into the running engine or stores the vapors in a canister when the engine is stopped. Although no adjustments are required, a thorough visual inspection must be made at the intervals specified by the Periodic Maintenance Chart.

# Inspection

- Check that the hoses are securely connected.
- Replace any kinked, deteriorated, or damaged hoses.

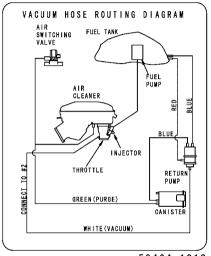

59464-1913

### Valve Clearance

Valve and valve seat wear decreases. valve clearance, upsetting valve timing.

## **NOTICE**

If valve clearance is left unadjusted, wear will eventually cause the valves to remain partly open; which lowers performance, burns the valves and valve seats, and may cause serious engine damage.

Valve clearance for each valve should be checked and adjusted in accordance with the Periodic Maintenance Chart

Inspection and adjustment should be carried out only by a competent mechanic following the instructions in the Service Manual

# Kawasaki Clean Air System

The Kawasaki Clean Air System (KCA) is a secondary air suction system that helps the exhaust gases to burn more completely. When the spent fuel charge is released into the exhaust system, it is still hot enough to burn. The KCA System allows extra air into the exhaust system so that the spent fuel charge can continue to burn. This continued burning action tends to burn up a great deal of the normally unburned gases, as well as changing a significant portion of the carbon monoxide into carbon dioxide.

### Air Suction Valves -


The air suction valve is essentially a check valve which allows fresh air to flow only from the air cleaner into the exhaust port. Any air that has passed

the air suction valve is prevented from returning. Inspect the air suction valves in accordance with the Periodic Maintenance Chart. Also, inspect the air suction valves whenever stable idling cannot be obtained, engine power is greatly reduced, or there are abnormal engine noises.

Air suction valve removal and inspection should be carried out only by a competent mechanic following the instructions in the Service Manual.

#### Exhaust Device

This motorcycle is equipped with a exhaust device system. This system controls the valve in the exhaust pipe and produces stable engine power at low and middle engine speed. This exhaust device is controlled by the ECU, and adjustment or maintenance should be done by an authorized Kawasaki dealer

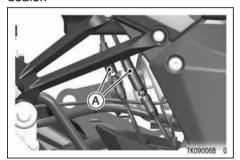

A. Exhaust Device Cables

# NOTICE

Do not adjust the exhaust device system by yourself. The maladjustment will cause the poor engine performance and engine damage.

### Air Cleaner


A clogged air cleaner restricts the engine's air intake, increasing fuel consumption, reducing engine power, and causing spark plug fouling.

The air cleaner element must be cleaned in accordance with the Periodic Maintenance Chart. In dusty, rainy, or muddy conditions, the element should be cleaned more frequently than the recommended interval.

Removal and cleaning should be done only by a competent mechanic following the instructions in the Service Manual.

### Oil Draining

 Inspect the transparent reservoir located on the left side of the engine to see if any oil or water has run down from the air cleaner housing.

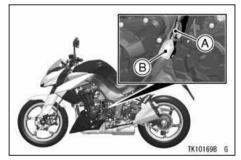

- A. Drain Hose
- B. Reservoir
- If there is any oil in the reservoir, remove the reservoir and drain the oil.

# **▲** WARNING

Oil on tires will make them slippery and can cause an accident and injury. Be sure to install the reservoir in the drain hose after draining.

## **Throttle Control System**


Check the throttle grip play each day before riding the motorcycle, and carry out maintenance and adjustments in accordance with the Periodic Maintenance Chart. Adjust it if necessary.

## Throttle Grip -

The throttle grip controls the butterfly valves in the throttle body. If the throttle grip has excessive play due to either cable stretch or maladjustment, it will cause a delay in throttle response, especially at low engine speed. Also, the throttle valve may not open fully at full throttle. On the other hand, if the throttle grip has no play, the throttle will be hard to control, and the idle speed will be erratic

### Inspection

• Check that the throttle grip play is correct by lightly turning the throttle grip back and forth.

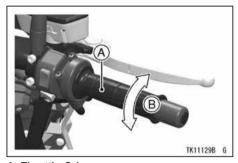

A. Throttle Grip B. Throttle Grip Play

# Throttle Grip Play


2 ~ 3 mm (0.08 ~ 0.12 in.)

• If there is improper play, adjust it.

## Adjustment

- Loosen the locknuts at the upper of the throttle cables, and screw both throttle cable adjusters completely so as to give the throttle grip plenty of play.
- Turn out the decelerator cable adjuster until it has no play when the throttle grip is completely closed. Tighten the locknut.

 Turn out the accelerator cable adjuster until the throttle grip has the proper play. Tighten the locknut.

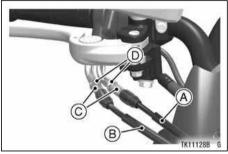

- A. Decelerator Cable
- B. Accelerator Cable
- C. Adjuster
- D. Locknuts
- If the throttle cables cannot be adjusted with the adjuster at the upper of the throttle cable, further adjustment of the throttle cables should be

- done by a competent mechanic following the instructions in the Service Manual
- With the engine idling, turn the handlehar to each side. If handlehar movement changes the idle speed, the throttle cables may be improperly adjusted or incorrectly routed, or they may be damaged. Be sure to correct any of these conditions before idling.

# WARNING

Operation with improperly adjusted, incorrectly routed or damaged cables could result in an unsafe riding condition. Follow the service manual to be make sure to correct any of these conditions.

# **Engine Vacuum Synchronization**

Engine vacuum synchronization must be checked and adjusted periodically in accordance with the Periodic Maintenance Chart by a competent mechanic following the instructions in the Service Manual.

### NOTE

 Poor engine vacuum synchronization will cause unstable idling, sluggish throttle response, and reduce engine power and performance.

## Idle Speed

The idle speed adjustment should be performed in accordance with the Periodic Maintenance Chart or whenever the idle speed is disturbed.

## Adjustment

- Start the engine, and warm it up thoroughly.
- Adjust the idle speed by turning the idle adjusting screw.

## Idle Speed

1 050 ~ 1 150 r/min (rpm)



#### A. Idle Adjusting Screw

- Open and close the throttle a few times to make sure that the idle speed does not change. Readjust if necessary.
- With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, the throttle cables may be improperly

adjusted or incorrectly routed, or they may be damaged. Be sure to correct any of these conditions before riding.

# WARNING


Operation with damaged cables could result in an unsafe riding condition. Replace damaged control cables before operation.

#### Clutch

Due to friction plate wear and clutch cable stretch over a long period of use, the clutch operation should be checked each day before riding the motorcycle, and must be adjusted in accordance with the Periodic Maintenance Chart.

## Inspection

- Check that the clutch lever operates properly and that the inner cable slides smoothly. If there is any irregularity, have the clutch cable checked by an authorized Kawasaki dealer.
- Check the clutch lever play as shown in the figure.

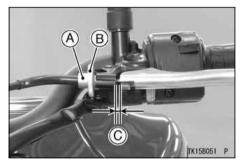

- A. Adjuster
- **B.** Locknut
- C. Clutch Lever Play

#### Clutch Lever Play

 $2 \sim 3 \text{ mm } (0.08 \sim 0.12 \text{ in.})$ 

If the play is incorrect, adjust the lever play as follows.

### Adjustment


- Loosen the locknut at the clutch lever
- Turn the adjuster so that the clutch lever will have the proper play. Tighten the locknut.

# **A** WARNING

Excess clutch cable play could prevent clutch disengagement and cause a crash resulting in serious injury or death. When adjusting the clutch cable, be sure the upper end of the outer cable is fully seated in its fitting so that it doesn't slip into place later and create excessive cable play.



 If it cannot be done, use the nuts at the lower end of the clutch cable.

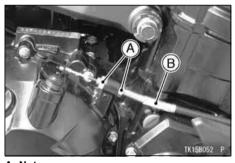

A. Nuts B. Clutch Cable

# **A** WARNING

To avoid a serious burn, never touch a hot engine or an exhaust pipe during clutch adjustment.

#### NOTE

- O After the adjustment is made, start the engine and check that the clutch does not slip and releases properly.
- For minor corrections, use the adjuster at the clutch lever.

# **A** DANGER

Exhaust gas contains carbon monoxide, a colorless, odorless poisonous gas. Inhaling carbon monoxide can cause serious brain injury or death. DO NOT run the engine in enclosed areas. Operate only in a well-ventilated area.

#### **Drive Chain**

The drive chain slack and lubrication must be checked each day before riding the motorcycle and must be maintained in accordance with the Periodic Maintenance Chart for safety and to prevent excessive wear. If the chain becomes badly worn or maladjusted either too loose or too tight - the chain could jump off the sprockets or break.


# **▲** WARNING

A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control. Inspect the chain for damage and proper adjustment before each ride.



### Chain Slack Inspection

- Set the motorcycle up on its side stand.
- Check the wheel alignment. Confirm that the notch on the swingarm and the mark on the chain adjuster are at the same position on the left and right sides. If they are different, adjust the wheel alignment (see Wheel Alignment Adjustment).

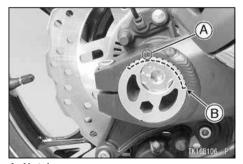


A. Notch B. Marks

# **A** WARNING

Misalignment of the wheel will result in abnormal wear, and may result in an unsafe riding condition. Align the rear wheel using the marks on the swingarm or measuring the distance between the center of the axle and swingarm pivot.

Rotate the rear wheel to find the position where the chain is tightest, and measure the maximum chain slack by pulling up and pushing down the chain midway between the engine sprocket and rear wheel sprocket.

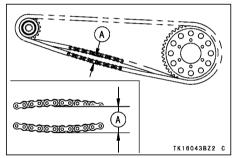

A. Chain Slack

#### MAINTENANCE AND ADJUSTMENT 117


 If the drive chain is too tight or too loose, adjust it so that the chain slack will be within the standard value.

#### **Drive Chain Slack**

Standard: 20 ~ 30 mm (0.8 ~ 1.2 in.)

## Chain Slack Adjustment

- Loosen the chain adjuster clamp bolts on the left and right sides.
- Turn the chain adjuster with the allen wrench until the drive chain has the correct amount of slack.

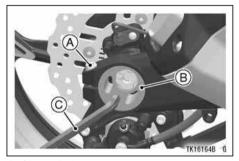

- A. Clamp Bolt
  B. Chain Adjuster
  C. Allen Wrench
- Tighten the chain adjuster clamp bolts to the specified torque.

 Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.

# **WARNING**

A loose clamp bolts can lead to an accident resulting in serious injury or death. Tighten the clamp bolts to the proper torque.

- Check the wheel alignment.
- Check the rear brake (see Brakes section in this chapter).

## **Tightening Torque**

Chain Adjuster Clamp Bolts:


64 N·m (6.5 kgf·m, 47 ft·lb)

#### NOTE

 If a torque wrench is not available, this item should be serviced by a Kawasaki dealer.

### Wheel Alignment Adjustment

- Remove the right retaining ring, and loosen the axle nut.
- Loosen the right clamp bolt.

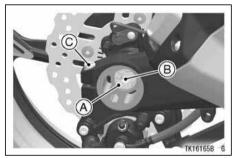

- A. Retaining Ring
- B. Axle Nut
- C. Clamp Bolt
- Turn the right chain adjuster with the allen wrench so that the notch on the swingarm and the mark on the chain

- adjuster are at the same position on the left and right sides.
- Tighten the axle nut to the specified torque.
- Install the retaining ring.

# **A** WARNING

A loose axle nut can lead to an accident resulting in serious injury or death. Tighten the axle nut to the proper torque and install a retaining ring.

 Check the rear brake (see Brakes section in this chapter).

## **Tightening Torque**

Axle Nut: 98 N·m (10 kgf·m, 72 ft·lb)


#### NOTE

 The wheel alignment adjustment can adjust at left chain adjuster also.

Olf a torque wrench is not available, this item should be serviced by a Kawasaki dealer.


## Wear Inspection

Slide the clip to the back.

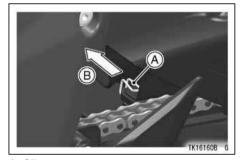

A. Clip B. Slide to back

- Remove the bolts and quick rivet.
- Remove the chain cover.

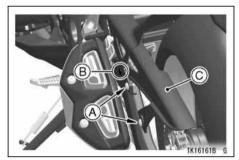


- A. Bolt
- **B. Quick Rivet**
- C. Chain Cover

### **NOTE**

O Pull up the core of the quick rivet by the flat-head screwdriver.

- Stretch the chain taut either by using the chain adjusters, or by hanging a 10 kg (20 lb) weight on the chain.
- Measure the length of 20 links on the straight part of the chain from pin center of the 1st pin to pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.
- If the length exceeds the service limit, the chain should be replaced.

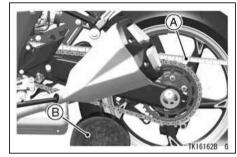

A. Measure B. Weight

Drive Chain 20-Link Length

Service Limit: 319 mm (12.56 in.)


# **A** WARNING

For safety, use only the standard chain. It is an endless type and should not be cut for installation; have it installed by an authorized Kawasaki dealer.

- Rotate the rear wheel to inspect the drive chain for damaged rollers, and loose pins and links.
- Also inspect the sprockets for unevenly or excessively worn teeth, and damaged teeth.

## NOTE

 Sprocket wear is exaggerated for illustration. See Service Manual for wear limits.

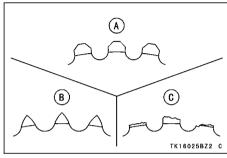


- A. Good Teeth
- B. Worn Teeth
- C. Damaged Teeth
- If there is any irregularity, have the drive chain and/or the sprockets replaced by an authorized Kawasaki dealer.

#### Lubrication

Lubrication is also necessary after riding through rain or on wet roads, or any time that the chain appears dry. A heavy oil such as SAE 90 is preferred to a lighter oil because it will stay on the chain longer and provide better lubrication.

 Apply oil to the sides of the rollers so that it will penetrate to the rollers and bushings. Apply oil to the O-rings so that the O-rings will be coated with oil. Wipe off any excess oil.

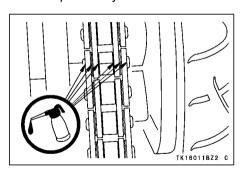


 If the chain is especially dirty, clean it using diesel oil or kerosine and then apply oil as described above.

#### **Brakes**

## Brake Wear Inspection

Inspect the brakes for wear. For each front and rear disc brake caliper, if the thickness of either pad is less than 1 mm (0.04 in.), replace both pads in the caliper as a set. Pad replacement should be done by an authorized Kawasaki dealer.

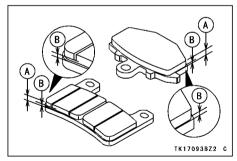

A. Lining Thickness B. 1 mm (0.04 in.)

#### Disc Brake Fluid -

In accordance with the Periodic Maintenance Chart, inspect the brake fluid level in both the front and rear brake fluid reservoirs and change the brake fluid. The brake fluid should also be changed if it becomes contaminated with dirt or water.

## Fluid Requirement

Use heavy-duty brake fluid only from a container marked DOT4.

## NOTICE

Do not spill brake fluid onto any painted surface.


Do not use fluid from a container that has been left open or that has been unsealed for a long time.

Check for fluid leakage around the fittings.

Check brake hose for damage.


### Fluid Level Inspection

 With the brake fluid reservoirs held horizontal, the brake fluid level must be kept between the upper and lower level lines.

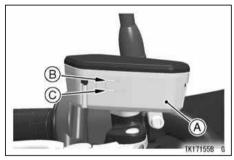

A. Front Brake Fluid Reservoir

- B. Upper Level Line
- C. Lower Level Line

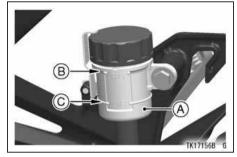


- A Rear Brake Fluid Reservoir
- **B.** Upper Level Line
- C. Lower Level Line
- If the fluid level in either reservoir is lower than the lower level line, check for fluid leaks in the brake lines, and fill the reservoir to the upper level line.

# **A** WARNING

Mixing brands and types of brake fluid can reduce the brake system's effectiveness and cause an accident resulting in injury or death. Do not mix two brands of brake fluid. Change the brake fluid in the brake line completely if the brake fluid must be refilled but the type and brand of the brake fluid that is already in the reservoir are unidentified.

#### NOTE

O First, tighten until slight resistance is felt, which indicates that the cap is seated on the reservoir body, and tighten the cap an additional 1/6 turn while holding the brake fluid reservoir body.

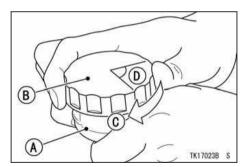

- A. Reservoir
- B. Cap
- C. Clockwise
- D. 1/6 turn

### Fluid Change

Have the brake fluid changed by an authorized Kawasaki dealer

#### Front and Rear Brakes -

Disc and disc pad wear is automatically compensated for and has no effect on the brake lever or pedal action. So there are no parts that require adjustment on the front and rear brakes.

# **▲** WARNING

Air in the brake lines diminish braking performance and can cause an accident resulting in injury or death. If the brake lever or pedal feels mushy when it is applied, there might be air in the brake lines or the brake may be defective. Have the brake checked immediately by an authorized Kawasaki dealer.


## **Brake Light Switches**

When either the front or rear brake is applied, the brake light goes on. The front brake light switch requires no adjustment, but the rear brake light switch should be adjusted in accordance with the Periodic Maintenance Chart.

## Inspection

- Turn the ignition key to ON.
- The brake light should go on when the front brake is applied.
- If it does not, ask an authorized Kawasaki dealer to inspect the front brake light switch.

 Check the operation of the rear brake light switch by depressing the brake pedal. The brake light should go on after the proper pedal travel.

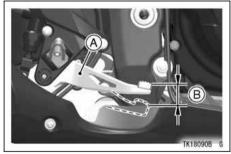

A. Brake Pedal B. 10 mm (0.4 in.)


 If it does not, adjust the rear brake light switch.

#### **Brake Pedal Travel**

10 mm (0.4 in.)


### Adjustment

- Remove the right front footpeg bracket bolts.
- Pull the footppeg bracket a little bit outward.

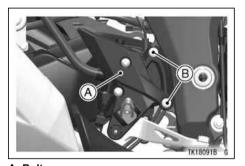

A. Bolts B. Right Front Footpeg Bracket

 To adjust the rear brake light switch, move the switch up or down by turning the adjusting nut.

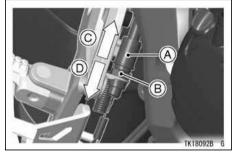

A. Rear Brake Light Switch

- **B.** Adjusting Nut
- C. Lights sooner
- D. Lights later

## **NOTICE**

To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.

 Reinstall the right front footpeg bracket.

# Tightening Torque

Front Footpeg Bracket Bolts:

25 N·m (2.5 kgf·m, 18 ft·lb)

### NOTE

 If a torque wrench is not available, this item should be serviced by a Kawasaki dealer.


#### Front Fork

The front fork operation and oil leakage should be checked in accordance with the Periodic Maintenance Chart.

## Front Fork Inspection


- Holding the brake lever, pump the front fork up and down several times to inspect smooth stroke.
- Visually inspect the front fork for oil leakage, scoring or scratches on the outer surface of the inner tube.

• If there is any doubt about the front fork, it should be checked by an authorized Kawasaki dealer

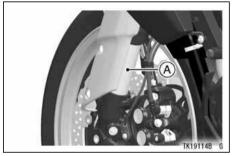


A. Inner Tube

On the top of each front fork leg are a spring preload adjuster and a rebound damping force adjuster, and on the lower portion of each front fork leg is a compression damping force adjuster so that the spring force and damping force can be adjusted for different riding and loading conditions. Weaker spring force and damping force are for comfortable riding, but they should be increased for high speed riding or riding on rough roads.

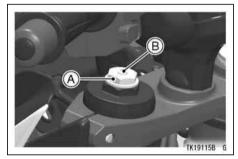

A. Spring Preload Adjuster B. Rebound Damping Force Adjuster

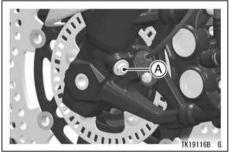

A. Compression Damping Force Adjuster

## **NOTICE**

Do not force to turn the rebound and compression damping force adjuster from the fully seated position, or the adjusting mechanism may be damaged.

## Spring Preload Adjustment


 Turn the spring preload adjusters in to increase spring force and out to decrease spring force. The adjusting range is as follows.

## **Adjusting Range**

15 turns

### Rebound Damping Force Adjustment

- Turn the rebound damping force adjuster all the way into the spring preload adjuster with a screwdriver. This makes the damping force greatest.
- Turn out the adjuster to decrease damping force. Be sure to turn both adjusters by the same number of turns.

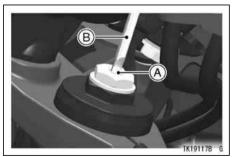

A. Rebound Damping Force Adjuster **B** Screwdriver

#### Compression Damping Force Adjustment

- Turn the compression damping force adjuster all the way clockwise with a screwdriver to make the damping force greatest.
- Turn the adjuster counterclockwise to decrease damping force. Be sure to turn both adjusters by the same number of turns

# **▲** WARNING

If both spring preload adjusters and both rebound and compression damping force adjusters are not adjusted equally, handling may be impaired and hazardous condition may result. Always adjust the suspension components equally.

The standard setting positions of the spring preload adjuster, rebound damping force adjuster and compression damping force adjuster for an average-build rider of 68 kg (150 lb) with no passenger and no accessories are as follows:

Spring Preload Adjuster	5 turns in*
Rebound Damping Force Adjuster	2 turns out**
Compression Damping Force Adjuster	1.75 turns out**

\*: in from the fully loosed position

\*\*: out from the fully tightened position

## Rear Shock Absorber

The rear shock absorber operation and oil leakage should be checked in accordance with the Periodic Maintenance Chart.

### Rear Shock Absorber Inspection

- Press down on the seat several times. to inspect the stroke.
- Visually inspect the rear shock absorber for oil leakage.
- If there is any doubt about the rear shock absorber, it should be checked by an authorized Kawasaki dealer.



A. Rear Shock Absorber

The rear shock absorber can be adjusted by changing the spring preload and rebound and compression damping force for various riding and loading conditions

Before making any adjustments, however, read the following procedures:

# NOTICE

Do not force to turn the rebound and compression damping force adjuster from the fully seated position or the adjusting mechanism may be damaged.

## Spring Preload Adjustment

The spring adjusting nut on the rear shock absorber can be adjusted.

If the spring action feels too soft or too stiff, have it adjusted by an authorized Kawasaki dealer.

Rebound Damping Force Adjustment

The rebound damping force adjuster is located at the lower end of the rear shock absorber.



#### A. Rebound Damping Force Adjuster

 Turn the rebound damping force adjuster all the way clockwise with a screwdriver to make the damping force greatest.  Turn the adjuster counterclockwise to decrease damping force.


The standard setting positions of the rebound damping force adjuster for an average-build rider of 68 kg (150 lb) with no passenger and no accessories are as follows:

Rebound Damping Adjuster	1.75 turns out*
--------------------------	-----------------


\*: out from the fully tightened position

#### Wheels

Tubeless tires are installed on the wheels of this motorcycle. The indications of TUBELESS on the tire side wall and the rim show that the tire and rim are specially designed for tubeless use.

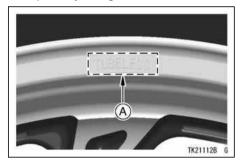

A. TUBELESS Mark

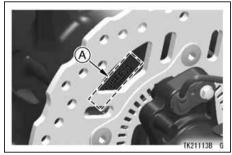

A TUBELESS Mark

The tire and rim form a leakproof unit by making airtight contacts at the tire chamfers and the rim flanges instead of using an inner tube.

# **A** WARNING

Installing a tube inside a tubeless-type tire can create excessive heat build up that can damage the tube and cause rapid deflation. The tires, rims, and air valves on this motorcycle are designed only for tubeless type wheels. The recommended standard tires, rims, and air valves must be used for replacement. Do not install tube-type tires on tubeless rims. The beads may not seat properly on the rim causing tire deflation. install a tube inside a tubeless Excessive heat build-up tire. may damage the tube causing tire deflation.

#### Tires -


## Payload and Tire Pressure

Failure to maintain proper inflation pressures or observe payload limits for your tires may adversely affect handling and performance of your motorcycle and can result in loss of control. The maximum recommended load in addition to vehicle weight is 180 kg (397 lb), including rider, passenger, baggage, and accessories.

- Remove the air valve cap.
- Check the tire pressure often, using an accurate gauge.
- Make sure to install the air valve cap securely.

### NOTE

 Measure the tire pressure when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours). O Tire pressure is affected by changes in ambient temperature and altitude, and so the tire pressure should be checked and adjusted when your riding involves wide variations in temperature or altitude.

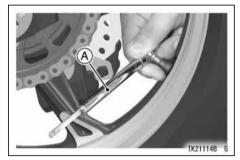

A. Tire Pressure Gauge

#### Tire Air Pressure (when cold)

Front	250 kPa (2.50 kgf/cm², 36 psi)
Rear	290 kPa (2.90 kgf/cm², 42 psi)

## Tire Wear, Damage

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life (90% worn). So it is false economy and unsafe to use the tires until they are bald.

 In accordance with the Periodic Maintenance Chart, measure the depth of the tread with a depth gauge, and replace any tire that has worn down to the minimum allowable tread depth.



A. Tire Depth Gauge

Minimum Tread Depth

Front	_	1 mm (0.04 in.)
Rear	Under 130 km/h (80 mph)	2 mm (0.08 in.)
	Over 130 km/h (80 mph)	3 mm (0.12 in.)

- Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Swelling or high spots indicate internal damage, requiring tire replacement.
- Remove any imbedded stones or other foreign particles from the tread.

#### NOTE

O Have the wheel balance inspected whenever a new tire is installed.

# **▲** WARNING

Tires that have been punctured and repaired do not have the same capabilities as undamaged tires and can suddenly fail. causing an accident resulting in serious injury or death. Replace damaged tires as soon as possible. To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure. If it is necessary to ride on a repaired tire, do not exceed 100 km/h (60 mph) until the tire is replaced.

#### NOTE

OWhen operating on public roadways, keep maximum speed under traffic law limits

#### Standard Tire (Tubeless)

Otalia.	d Tile (Tubeless)
Front	Make, Type: DUNLOP D210F J Size: 120/70ZR17 M/C (58W)
	Make, Type: PIRELLI DIABLO ROSSO K Size: 120/70ZR17 M/C (58W)
Rear	Make, Type: DUNLOP D210 Size: 190/50ZR17 M/C (73W)
	Make, Type: PIRELLI DIABLO ROSSO K Size: 190/50ZR17 M/C (73W)

# **A** WARNING

Some replacement tires may adversely affect handling and cause an accident resulting in serious injury or death. To ensure proper handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure.



New tires are slippery and may cause loss of control and injury. A break-in period of 160 km (100 miles) is necessary to establish normal tire traction. During break-in, avoid sudden and maximum braking and acceleration, and hard cornering.

## **Battery**

The battery installed in this motorcycle is a sealed type, so it is not necessary to check the battery electrolyte level or add distilled water.

The sealing strip should not be pulled off once the specified electrolyte has been installed in the battery for initial service

However, in order to maximize battery life and ensure that it will provide the power needed to start the motorcycle you must properly maintain the battery's charge. When used regularly, the charging system in the motorcycle helps keep the battery fully charged. If your motorcycle is only used occasionally or for short periods of time, the battery is more likely to discharge.

Due to their internal composition, batteries continually self discharge. The discharge rate depends on the type of battery and ambient temperature. As temperature rises, so does the discharge rate. Every 15°C (27°F) doubles the rate

Electrical accessories, such as digital clocks and computer memory, also draw current from the battery even when the key is switched off. Due to a combination of such "key-off" draws and hot temperature, a battery can go from fully charged to completely discharged in a matter of days.

#### 144 MAINTENANCE AND ADJUSTMENT

Self-discharge			
	Approx. number of days from 100% charged to 100% discharged		
Temperature	Lead -Antimony	Lead -Calcium	
	Battery	Battery	
40°C (104°F)	100 Days	300 Days	
25°C (77°F)	200 Days	600 Days	
0°C (32°F)	550 Days	950 Days	

Current Drain			
Discharging Ampere	Days from 100% charged to 50% discharged	Days from 100% charged to 100% discharged	
7 mA	60 Days	119 Days	
10 mA	42 Days	83 Days	
15 mA	28 Days	56 Days	
20 mA	21 Days	42 Days	
30 mA	14 Days	28 Days	

In extremely cold weather the fluid in an inadequately charged battery can easily freeze, which can crack the case and buckle the plates. A fully charged battery can withstand sub-freezing temperature with no damage.

## **Battery Sulfation -**

A common cause of battery failure is sulfation.

Sulfation occurs when the battery is left in a discharged condition for an extended time. Sulfate is a normal by product of the chemical reactions within a battery. But when continuous discharge allows the sulfate to crystallize in the cells, the battery plates become permanently damaged and will not hold a charge. Battery failure due to sulfation is not warrantable

## **Battery Maintenance -**

It is the owner's responsibility to keep the battery fully charged. Failure to do so can lead to battery failure and leave you stranded.

If you are riding your vehicle infrequently, inspect the battery voltage weekly using a voltmeter. If it drops below 12.8 volts, the battery should be charged using an appropriate charger (check with a Kawasaki dealer). If you will not be using the motorcycle for longer than two weeks, the battery should be charged using an appropriate charger. Do not use an automotive-type quick charger that may overcharge the battery and damage it.

#### NOTE

O Leaving the battery connected causes the electrical components (clock etc) to make the battery discharged, resulting the over discharge of the battery. In this case, the repair or replacement of the battery is not included in the warranty. If you do not drive for four weeks or more, disconnect the battery from the vehicle.

#### Kawasaki-recommended chargers are:

OptiMate III Yuasa 1.5 Amp Automatic charger Battery Mate 150-9

If the above chargers are not available, use equivalent one.

For more details, ask a Kawasaki dealer.

## **Battery Charging -**

- Remove the battery from the motorcycle (see Battery Removal).
- Attach the leads from the charger to the battery and charge the battery at a rate that is 1/10th of the battery capacity. For example, the charging rate for a 10 Ah battery would be 1.0 ampere.
- The charger will keep the battery fully charged until you are ready to reinstall the battery in the motorcycle (see Battery Installation).

## NOTICE

Never remove the sealing strip, or the battery can be damaged. Do not install a conventional battery in this motorcycle, or the electrical system cannot work properly.

### NOTE


Of you charge the sealed battery, never fail to observe the instructions shown in the label on the battery.

## **A** WARNING

Lead is a toxic substance. Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

### Battery Removal

- Remove the rider's seat (see Seats section in the GENERAL INFORMA-TION chapter).
- Remove the red cap form the (+) terminal.
- Disconnect the cables from the battery, first from the (-) terminal and then the (+) terminal.

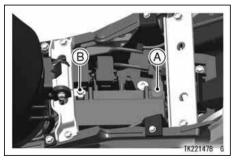

A. (+) Terminal B. (-) Terminal

- Take the battery out of the case.
- Clean the battery using a solution of baking soda and water. Be sure that the wire connections are clean

## Battery Installation

- Place the battery in the battery case.
- Connect the (+) cable to the (+) terminal, and then connect the (-) cable to the (-) terminal.

## **NOTICE**

Installing the (-) cable to the (+) terminal of the battery or the (+) cable to the (-) terminal of the battery can seriously damaged the electrical system.

 Put a light coat of grease on the terminals to prevent corrosion.

#### 148 MAINTENANCE AND ADJUSTMENT


- Cover the (+) terminal with the red cap.
- Reinstall the removed parts.

## **Headlight Beam**

## Horizontal Adjustment

The headlight beam is adjustable horizontally. If not properly adjusted horizontally, the beam will point to one side rather than straight ahead.

 Turn the horizontal adjuster in or out until the beam points straight ahead.

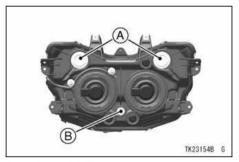

- A. Horizontal Adjusters
- B. Vertical Adjuster

## Vertical Adjustment

The headlight beam is adjustable vertically. If adjusted too low, neither low nor high beam will illuminate the road far enough ahead. If adjusted too high, the high beam will fail to illuminate the road close ahead, and the low beam will blind oncoming drivers.

• Turn the vertical adjuster in or out to adjust the headlight vertically.


### **NOTE**

On high beam, the brightest point should be slightly below horizontal. The proper angle is 0.4 degrees below horizontal. This is a 50 mm (2.0 in.) drop at 7.6 m (25 ft) measured from the center of the headlight, with the motorcycle on its wheels and the rider seated

## NOTICE

When handling the quartz -halogen bulbs, never touch the glass portion with bare hands. Always use a clean cloth. Oil contamination from hands or dirty rags can reduce bulb life or cause the bulb to explode.

#### 150 MAINTENANCE AND ADJUSTMENT

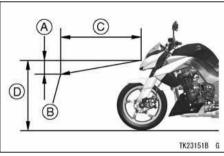


- A. 50 mm (2.0 in.)
- **B.** Center of Brightest Spot
- C. 7.6 m (25 ft)
- D. Height of Headlight Center


#### **Fuses**

Fuses are arranged in the fuse box located under the rider's seat. The main fuse is located under the fuel tank. If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.

The main fuse removal should be done by an authorized Kawasaki dealer.

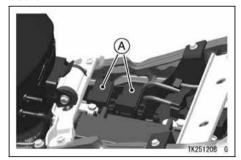


A. Fuse Boxes

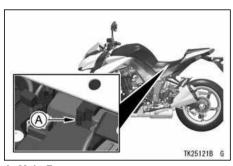

A Main Fuse

## **A** WARNING

Substituting fuses can cause wiring to overheat, catch fire and/or fail. Do not use any substitute for the standard fuse. Replace the blown fuse with a new one of the correct capacity, as specified on the fuse boxes and main fuse.

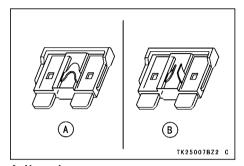

A. Normal B. Failed

#### 152 MAINTENANCE AND ADJUSTMENT

#### **General Lubrication**

Lubricate the points shown below, with either motor oil or regular grease, in accordance with the Periodic Maintenance Chart or whenever the vehicle has been operated under wet or rainy conditions.

Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.

### NOTE


OA few drops of oil are effective to keep bolts and nuts from rusting and sticking. This makes removal easier. Badly rusted nuts, bolts, etc., should be replaced with new ones.

# Apply motor oil to the following pivots -

- OSide Stand
- OClutch Lever
- Front Brake Lever
- ORear Brake Pedal

# Lubricate the following cables with a pressure cable lubber -

- ○(K) Clutch Inner Cable
- ○(K) Throttle Inner Cables

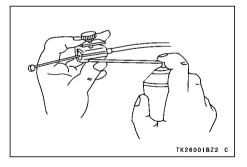

### Apply grease to the following points -

- O(K) Clutch Inner Cable Upper End
- O(K) Throttle Inner Cable Upper Ends

(K): Should be serviced by an authorized Kawasaki dealer.

#### NOTE

O After connecting the cables, adjust them

## Cleaning Your Motorcycle

General Precautions


Frequent and proper care of your Kawasaki motorcycle will enhance its appearance, optimize overall performance, and extend its useful life. Covering your motorcycle with a high quality, breathable motorcycle cover will help protect its finish from harmful UV rays, pollutants, and reduce the amount of dust reaching its surfaces.

- Be sure the engine and exhaust are cool before washing.
- Avoid applying degreaser to seals, brake pads, and tires.
- Avoid all harsh chemicals, solvents, detergents, and household cleaning products such as ammonia-based window cleaners.
- Gasoline, brake fluid, and coolant will damage the finish of painted and

#### 154 MAINTENANCE AND ADJUSTMENT


- plastic surfaces: wash them off immediately.
- Avoid wire brushes, steel wool, and all other abrasive pads or brushes.
- Use care when washing the windshield, headlight cover, and other plastic parts as they can easily be scratched.
- Avoid using pressure washers; water can penetrate seals and electrical components and damage your motorcycle.
- Avoid spraying water in delicate areas such as in air intakes, fuel system, brake components, electrical components, muffler outlets, and fuel tank openings.

 After cleaning your motorcycle, check the rubber boot covering the shift pedal ball joint for correct installation. Be sure the sealing lip of the rubber boot fits into the groove of the ball joint.

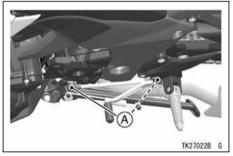

A. Boots

 If the boot is damaged, replace it with a new one. If the boot is not positioned in the groove correctly, replace it in the correct position.

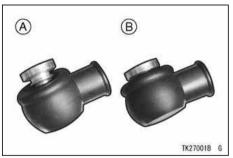

A. Wrongly set lip not in the correct position B. Lip set correctly in the groove

## Washing Your Motorcycle

 Rinse your bike with cold water from a garden hose to remove any loose dirt.

- Mix a mild neutral detergent (designed for motorcycles or automobiles) and water in a bucket. Use a soft cloth or sponge to wash your motorcycle. If needed, use a mild degreaser to remove any oil or grease which build up.
- After washing, rinse your motorcycle thoroughly with clean water to remove any residue (residue from the detergent can damage parts of your motorcycle).
- Use a soft cloth to dry your motorcycle. As you dry, inspect your motorcycle for chips and scratches. Do not let the water air dry as this can damage the painted surfaces.
- Start the engine and let it idle for several minutes. The heat from the engine will help dry moist areas.
- Carefully ride your motorcycle at a slow speed and apply the brakes

#### 156 MAINTENANCE AND ADJUSTMENT

- several times. This helps the brakes dry and restores its normal operating performance.
- Lubricate the drive chain to prevent rusting.

#### NOTE

O After riding in an area where the roads are salted or near the ocean, immediately wash your motorcycle with cold water. Do not use warm water as it accelerates the chemical reaction of the salt. After drying, apply a corrosion protection spray on all metal and chrome surfaces to prevent corrosion.

O Condensation may form on the inside of the headlight lens after riding in the rain, washing the motorcycle or humid weather. To remove the moisture, start the engine and turn on the headlight. Gradually the condensation on the inside of the lens will clear off.

#### Other Plastic Parts

After washing use a soft cloth to gently dry plastic parts. When dry, treat the headlight lens and other non-painted plastic parts with an approved plastic cleaner/polisher product.

## **NOTICE**

Plastic parts may deteriorate and break if they come in contact with chemical substances or household cleaning products such as gasoline, brake fluid, window cleaners, thread-locking agents, or other harsh chemicals. If a plastic part comes in contact with any harsh chemical substance, wash it off immediately with water and a mild neutral detergent, and then inspect for damage. Avoid using abrasive pads or brushes to clean plastic parts, as they will damage the part's finish.

#### Chrome and Aluminum

Chrome and uncoated aluminum parts can be treated with a chrome/aluminum polish. Coated aluminum should be washed with a mild neutral detergent and finished with a spray polish. Aluminum wheels, both painted and unpainted can be cleaned with special non-acid based wheel spray cleaners.

## Leather, Vinyl, and Rubber

If your motorcycle has leather accessories, special care must be taken. Use a leather cleaner/treatment to clean and care for leather accessories Washing leather parts with detergent and water will damage them, shortening their life.

Vinyl parts should be washed with the rest of the motorcycle, then treated with a vinyl treatment.

The sidewalls of tires and other rubber components should be treated with a rubber protectant to help prolong their useful life


## **A** WARNING

Rubber protectants can be slippery and, if used on the tread area, cause loss of traction resulting in accident causing injury or death. Do not apply rubber protectant to any tread area.

## **Bolt and Nut Tightening**


In accordance with the Periodic Maintenance Chart, it is very important to check the tightness of the bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition. Please ask your authorized Kawasaki dealer for torque values.

- 1. Clutch Lever Holder Bolts
- 2. Steering Stem Head Nut
- 3. Handlebar Clamp Bolts
- 4. Front Fork Clamp Bolts
- 5. Brake Lever Mounting **Bolts**

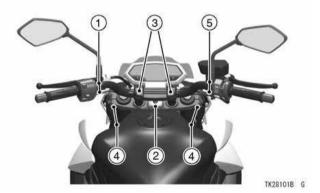


#### 160 MAINTENANCE AND ADJUSTMENT

- 6. Front Fender Mounting Bolts
- 7. Engine Mounting Bolts and Nuts
- 8. Rear Frame Mounting Bolts
  9. Brake Disc Mounting Bolts
- 10. Front Axle Clamp Bolt
- 11. Front Axle Nut
- 12. Caliper Mounting Bolts
- 13. Side Stand Bolt
- 14. Uni-trak Tie-Rod Nuts
- 15. Swingarm Pivot Shaft Nut
- 16. Footpeg Mounting Bolt
- 17. Rear Shock Absorber Mounting Bolts
- 18. Rear Axle Nut
- 19. Rear Sprocket Nuts

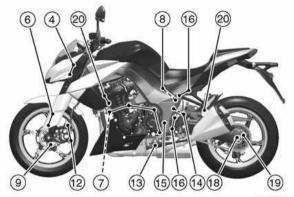

#### MAINTENANCE AND ADJUSTMENT 161

- 20. Silencer Mounting Bolt
- 21. Brake Pedal Bolt
- 22. Exhaust Pipe Mounting Nuts

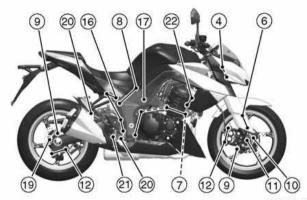

K28103B G

## **STORAGE**

## **Preparation for Storage**

- Clean the entire vehicle thoroughly.
- Run the engine for about five minutes to warm the oil, shut it off, and drain the engine oil.

## **A** WARNING

Motorcycle oil is a toxic substance. Dispose of used oil properly. Contact your local authorities for approved disposal methods or possible recycling.

- Put in fresh engine oil.
- Empty the fuel from the fuel tank by the pump or siphon.

## **A** WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition key to "OFF". Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Gasoline is a toxic substance. Dispose of gasoline properly. Contact your local authorities for approved disposal methods.

- Empty the fuel system by running the engine at idle speed until the engine stalls (If left in for a long time, the fuel will break down and could clog the fuel system.).
- Reduce tire pressure by about 20%.
- Set the motorcycle on a box or stand so that both wheels are raised off the ground (If this cannot be done, put boards under the front and rear wheels to keep dampness away from the tire rubber.).
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or in the brakes.
- Lubricate the drive chain and all the cables.
- Remove the battery, and store it where it will not be exposed to direct sunlight, moisture, or freezing temperature. During storage it should be given a slow charge (one ampere or less) about once a month. Keep the battery well charged especially during cold weather.
- Tie plastic bags over the mufflers to prevent moisture from entering.

#### 164 STORAGE

• Put a cover over the motorcycle to keep dust and dirt from accumulating on it.

## **Preparation after Storage**

- Remove the plastic bags from the mufflers.
- Install the battery in the motorcycle and charge the battery if necessary.
- Fill the fuel tank with fuel.
- Check all the points listed in the Daily Safety Checks section.
- Lubricate the pivots, bolts, and nuts.

## TROUBLESHOOTING GUIDE

## **Engine Does Not Start -**

Starter Motor Won't Turn

- Engine stop switch off
- Transmission not in neutral.
- Fuse blown
- Battery leads do not make good electrical contact with battery terminals
- Battery discharged

### Engine Cranks, But Won't Start

- No fuel in tank
- Fuel line clogged
- Fuel broken down
- Engine flooded
- Spark plugs not in good contact
- Spark plugs fouled or wet
- Incorrect spark plug gap

- Incorrect valve clearance
- Battery discharged
- No first turning the ignition key to "OFF" when the motorcycle falls down

#### **Engine Stalls -**

Just When Shifting Into 1st Gear

- Side stand has been left down.
- Clutch does not properly disengage

### While Riding

- No fuel in tank
- Fuel tank air vent is obstructed
- Overheating
- Battery discharged

### OWNER SATISFACTION

## (For Products Sold in the Continental United States of America Only)

Your satisfaction is important to your authorized Kawasaki dealer and to Kawasaki Motors Corp., U.S.A. If you have a problem concerning warranty or service, please take the following action:

Contact the owner and/or service manager of your authorized Kawasaki dealer. Fully explain your problem and ask for assistance in resolving the situation. The OWNER of the dealership is concerned with your satisfaction and your future business. For this reason the owner is in the best position to assist you. Also, all warranty and service matters are handled and resolved through the authorized Kawasaki dealer network.

If you are unsatisfied after working with your Kawasaki dealer and feel you still require further assistance, write to the address below. Please be certain to provide the model, product identification number, mileage or hours of use, accessories, dates that events occurred and what action has been taken by both you and your dealer. Include the name and address of the dealership. To assist us in resolving

your inquiry, please include copies of related receipts and any other pertinent information including the names of the dealership personnel with whom you have been working in the resolution of your problem.

Upon receipt of your correspondence we will contact the dealership and work with them in resolving your problem.

In order to provide a permanent record, all warranty and service resolutions take place only through written correspondence.

Please send your correspondence to: CONSUMER RELATIONS KAWASAKI MOTORS CORP., U.S.A. P. O. Box 25252 SANTA ANA, CA. 92799-5252 (949) 460–5688

## REPORTING SAFETY DEFECTS

## (For Products Sold in the Continental United States of America Only)

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Kawasaki Motors Corporation, U.S.A.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Kawasaki Motors Corporation, U.S.A.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800 -424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

## **ENVIRONMENTAL PROTECTION**

To protect our environment, properly discard used batteries, tires, engine oil, or other vehicle components that you might dispose of in the future. Consult your authorized Kawasaki dealer or local environmental waste agency for their proper disposal procedures.


Owner Name
Address
Phone Number
Engine Number
Vehicle Number
Selling Dealer Name
Phone Number
Narranty Start Date

Date	Odometer Reading	Maintenance Performed	Dealer Name	Dealer Address


Date	Odometer Reading	Maintenance Performed	Dealer Name	Dealer Address

Date	Odometer Reading	Maintenance Performed	Dealer Name	Dealer Address

Date	Odometer Reading	Maintenance Performed	Dealer Name	Dealer Address

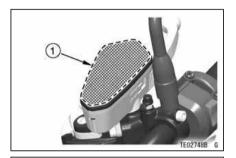





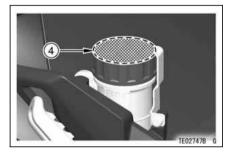

- Brake Fluid (Front)
   Important Drive Chain Information
   Tire and Load Data
- 4. Brake Fluid (Rear)




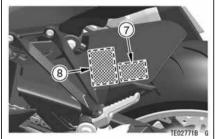


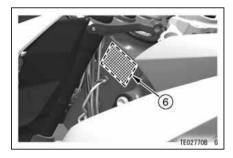


- 5. Noise Emission Control Information
- 6. Weight and Manufacture \*7. Vehicle Emission Control Information
- \*8. Vacuum Hose Routing Diagram

\*: only on California model

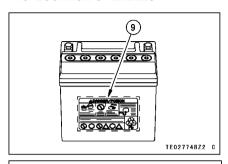

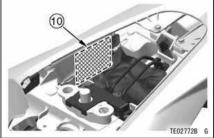

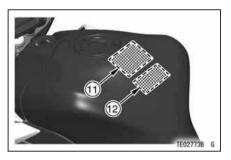

- 9. Battery Poison/Danger 10. Daily Safety Checks \*11. Fuel Level

- 12. Fuel Notice

\*: only on California model

1)



2)

#### IMPORTANT DRIVE CHAIN INFORMATION

To prevent an accident and/or damage to the motorcycle, the drive chain must be properly maintained. It should be lubricated every 800km (400mi) and adjusted as often as necessary to keep chain slack at about 20~30mm (0.8~1.2in) measured midway between sprockets on the lower chain run with the motorcycle on the side stand. The standard chain is an ENUMA EXSEXX with estimated service life of 15000-45000km (9400-28000mi), depending on the severity of use and the frequency of lubrication and adjustment. For safety, replace the chain with only the standard chain any time it wears to over 319mm (12.56in), measured over a 20-link portion youlled straight with 98N(10kgf, 2016f) of tension. See the Owner's Manual for chain information.

56033-0345

TE03405CN8 C

## 3)

ĺ			TIRE	ANDL	OAD DA	AT A
	tire	inflution pressure	s. overvore til	res, unsuiteble rep	acement tires, er i	on: unsafe by the use of Improporation of Improporation of the second version of the second version of the second of the Indian
		Air Pressur		Size & Make Type	(Tubeless Tire)	Minimum Tread Depth
	Frent		250 kPa (2.50kpt/cm,386sil	DUNLOP 120/70ZR17N/C (58N) 0210F J	PIRELLI 120/70ZR17N/C (58W) DIABLO ROSSO K	1 mm(0.04ln)
	Rear	(397Lbs)	290 kPa (2.50191/cm.42881)	DUNLOP 190/50ZR1TM/C (73N) D210	P(RELL) 190/50ZR17M/C (73M) DIABLO ROSSO (	Up to 130 km/h(80MPH) 2 mm(0,08 Over 130 km/h(80MPH) 3 mm(0,18

56053-0456

TE03407C S

4)

5)

MOTORCYCLE NOISE EMISSION CONTROL INF.
THIS 2010 NOTORCYCLE MEETS FRA NOISE EMISSION
REQUIREMENTS BY THE FEDERAL TEST PROCEDURE.
NODIFICATIONS WHICH CAUSE THIS NOTORCYCLE TO
EXCEED FEDERAL NOISE STANDARDS ARE PROMIBITED
BY FEDERAL LAW, SEE OWNER'S MANUAL. (ZR1000D)
MODEL SPECIFIC CODE:KAW8061000
SEE VEHICLE IDENTIFICATION NUMBER ON STEERING HEAD
NOISE LIMIT/CLOSING PPM \*RODBA/55000RPM

59464-1911 TE03438CN9 C

6)

GFD. BY KAMASAKI HEAVY INDUSTRIES, LTD.

JATE: \_\_\_\_\_\_ THIS VEHICLE CONFORMS

TO ALL APPLICABLE FEDERAL MOTOR VEHICLE
SAFETY STANDARDS IN EFFECT ON THE DATE
OF MANUFACTURE SHOWN ABOVE. SAVER 877 LBS.
GARF F 311 LBS. WITH 120/70CR178/C(58W)
THE, JITH/CXVXII 3.50 RH, A 1.3 6 781. COLD.
GARR R 586 LBS. WITH 190/50CR178/C(73W)
THE, JITH/CXVXII 3.00 RH, A 1.4 2 781. COLD.

WIXA/ROOTXXX XXXXXXI

WOOR CYCLE (ZK10000) MADE IN JAPAN


59464-1904 TE03435CN9 C

INFORMATION SUR LES DISPOSITIFS ANTIPOLLUTION DU VÉHICULE
CODE DE FAMILLE DE MOTEUR: <u>AKAXC1. 04AAA</u> FAMILLE DE PERMÉATION: <u>AKAXPMETALO1</u>
MODÈLE(S) ZR1000DA
SYSTÈME ANTIPOLLUTION À L'ÉCHAPPEMENTSFI+PAIR+20C
CYLINDRÉE
SPÉCIFICATIONS DE MISE AU POINT
CALAGE DE L'ALLUNAGE   10° APMH À 1100 TR/MIN
RÉGIME DE RALENTI 1100 ± 50 TR/MIN AU POINT MORT
RÉGLAGE DU MÉLANGE AUCUN AJUSTEMENT AIR/ESSENCE DE RALENTI
JEU DE SOUPAPE   ADMISSION : 0.15-0.24 MM (0.0059-0.0094 PO.)
(MOTEUR FROID)
BOUGIE CR9EIA-9 (NGK) ÉCART DES ÉLECTRODES: 0.8-0.9 MM (0.031-0.035 PO.)
CARBURANT ESSENCE AVEC   INDICE ANTIDÉTONANT (IOR+IOM)/2 90 MIN.
HUILE MOTEUR QUALITÉ : (API) SG, SH, SJ, SL OU SM SI CONFORME À JASO MA
VISCOSITÉ : SAE 10W-40
VOIR LE GUIDE DE L'UTILISATEUR POUR L'INFORMATION SUR L'HUILE MOTEUR.
CE VÉHICULE EST CONFORME AUX NORMES U.S.EPA S'APPLIQUANT AUX
MODÈLES DE MOTOCYCLETTES NEUVES 2010 ET EST CERTIFIÉ AUX Normes d'énissions de hc+nox de 0.7g/km.kanasaki heavy industries, ltd. <b>Koncoold</b>
NORMES D'ÉNISSIONS DE HG+NOX DE 0.7G/KM.KAWASAKI HEAVY INDUSTRIES, LTD. Kannesseld

## 7) only on California model

VEHICLE EMISSION CONTROL INFORMATION  ENGINE FAMILY CODE AKAXCI. 04AAA PERMEATION FAMILY AKAXPMETALO1 EVAP. FAMILY AKAXCUI. 0A6A MODEL(S) SELEVALO SELEVALODA EXHAUST EMISSION CONTROL SYSTEM SELEVALODA DISPLACEMENT 1043 CC  TUNE UP SPECIFICATIONS  IGNITION TIMING 10° BDC AT 1100 RPM IDLE SPEED 1100 ± 50 RPM IN NEUTRAL IDLE AIR FUEL NO ADJUSTMENT MIXTURE SETTING VALVE CLEARANCE INTAKE : 0.15-0.24 MM (0.0059-0.0094 IN) (ENGINE COLD) EXHAUST : 0.22-0.31 MM (0.0087-0.0122 IN) SPARK PLUG CR9EIA-9 (NGK) SPARK PLUG GAP : 0.8-0.8 MN (ENGINE COLD) EXHAUST : 0.22-0.31 MM (0.0031-0.035 IN)  FUEL GASOLINE WITH ANTIKNOCK INDEX (RON+NON)/2 90MIN.  ENGINE OIL SERVICE RATING : (API) SG. SH. SJ. SL OR SM VISCOSITY : SAE 10W-40 SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+NOX ENGINE FAMILY EXHAUST	
EVAP. FAWILY	VEHICLE EMISSION CONTROL INFORMATION
MODEL(S)	ENGINE FAMILY CODE <u>AKAXC1.04AAA</u> PERMEATION FAMILY <u>AKAXPMETALO1</u>
EXHAUST EMISSION CONTROL SYSTEM	EVAP. FAMILY AKAXU17. 0A04
DISPLACEMENT	MODEL(S) <u>ZR1000DA</u>
TUNE UP SPECIFICATIONS  IGNITION TIWING 10° BTDC AT 1100 RPW  IDLE SPEED 1100 ± 50 RPW IN NEUTRAL  IDLE AIR FUEL NO ADJUSTMENT  WIXTURE SETTING  VALYE CLEARANCE INTAKE : 0.15-0.24 NW (0.0059-0.0094 IN)  (ENGINE COLD) EXHAUST : 0.22-0.31 NW (0.0087-0.0122 IN)  SPARK PLUG CR9EIA-9 (NGK) SPARK PLUG GAP : 0.8-0.9 MW  FUEL GASOLINE WITH ANTIKNOCK INDEX (RON+WON)/2 90NIN.  ENGINE OIL SERVICE RATING : (API) SG. SH. SJ. SL OR SW  WITH JASO MA  VISCOSITY : SAE 10W-40  SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U. S. EPA AND CALIFORNIA  REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES  AND IS CERTIFIED TO 0.76/KW HC+NOX ENGINE FAWILY EXHAUST	EXHAUST EMISSION CONTROL SYSTEM <u>SFI+PAIR+20C</u>
IGNITION TIMING	DISPLACEMENT
IDLE SPEED  IDLE AIR FUEL MIXTURE SETTING  VALVE GLEARANCE (ENGINE COLD) EXHAUST : 0.22-0.31 MM (0.0059-0.0094 IN) (ENGINE COLD) EXHAUST : 0.22-0.31 MM (0.0087-0.0122 IN)  SPARK PLUG CRSEIA-9 (NGK) SPARK PLUG GAP : 0.8-0.8 MM (0.031-0.035 IN)  FUEL  GASOLINE WITH ANTIKNOCK INDEX (RON+MON)/2 90MIN.  ENGINE OIL SERVICE RATING : (API) SG. SH. SJ. SL DR SM VISCOSITY : SAE 10W-40 SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VENICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HG+NOX ENGINE FAMILY EXHAUST	TUNE UP SPECIFICATIONS
IDLE AIR FUEL MIXTURE SETTING VALVE CLEARANDE INTAKE: 0.15-0.24 NM (0.0059-0.0094 IN) (ENGINE COLD) EXHAUST: 0.22-0.31 NM (0.0087-0.0122 IN) SPARK PLUG CRSEIA-9 (NGK) SPARK PLUG GAP: 0.8-0.9 NM (0.031-0.035 IN)  FUEL GASOLINE WITH ANTIKNOCK INDEX (RON+NON)/2 90NIN. ENGINE OIL SERVICE RATING: (API) SG. SH. SJ. SL OR SM VISCOSITY: SAE 10N-40 SEE THE OWNER'S NANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+NOX ENGINE FAMILY EXHAUST	
MIXTURE SETTING  VALVE GLEARANCE INTAKE: 0.15-0.24 MM (0.0059-0.0094 IN) (ENGINE COLD) EXHAUST: 0.22-0.31 MM (0.0087-0.0122 IN)  SPARK PLUG CR9EIA-9 (NGK) SPARK PLUG GAP: 0.8-0.9 MM  FUEL GASOLINE WITH ANTIKNOCK (INDEX (RON+MON)/2 90NIN.  ENGINE OIL SERVICE RATING: (API) SG. SH. SJ. SL OR SW. WITH JASO MA  VISCOSITY: SAE 10W-40  SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA  REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.70/KM HC+NOX ENGINE FAMILY EXHAUST	
CENGINE COLD)   EXHAUST : 0.22-0.31 MM (0.0087-0.0122 IN)	
SPARK PLUG CR9EIA-9 (NGK) SPARK PLUG GAP: 0.8-0.9 MM (0.031-0.035 IN)  FUEL GASOLINE WITH ANTIKNOCK INDEX (RON+MON)/2 90MIN.  ENGINE OIL SERVICE RATING: (API) SG. SH. SJ. SL OR SM WITH JASO MA VISCOSITY: SAE 10W-40 SEE THE OWNER: SWANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S.EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+ROX ENGINE FAMILY EXHAUST	
FUEL GASOLINE WITH ANTIKHOCK INDEX (RON+WON)/2 90MIN.  ENGINE OIL SERVICE RATING: (API) SG, SH, SJ, SL OR SW WITH JASO MA  VISCOSITY:SAE 10W-40  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KW HC+MOX ENGINE FAWILY EXHAUST	SPARK PLUG CR9EIA-9 (NGK) SPARK PLUG GAP : 0.8-0.9 MM
ENGINE OIL  SERVICE RATING: (API) SC. SH. SJ. SL DR SM  VISCOSITY: SAE 10M-40  SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+MOX ENGINE FAMILY EXHAUST	FUEL GASOLINE WITH
VISCOSITY: SAE 10W-40  VISCOSITY: SAE 10W-40  SEE THE OWNER'S WANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KW HC+MOX ENGINE FAWILY EXHAUST	
VISCOSITY: SAE 10N-40 SEE THE OWNER'S MANUAL FOR ENGINE OIL INFORMATION.  THIS VEHICLE CONFORMS TO U.S.EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW NOTORCYCLES AND IS CERTIFIED TO 0.76/KN HC+NOX ENGINE FAMILY EXHAUST	
THIS VEHICLE CONFORMATION.	
THIS VEHICLE CONFORMS TO U.S.EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+NOX ENGINE FAMILY EXHAUST	
REGULATIONS APPLICABLE TO 2010 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.76/KM HC+NOX ENGINE FAMILY EXHAUST	
	AND IS CERTIFIED TO 0.76/KM HC+NOX ENGINE FAMILY EXHAUST
	ENISSION STANDARD IN CALIFORNIA.
KAWASAKI HEAYY INDUSTRIES, LTD.	KAWASAKI HEAVY INDUSTRIES, LTD.

## 8) only on California model

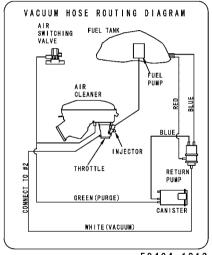


59464-1913

TE03429CN7 C



, TE032200 S 10)

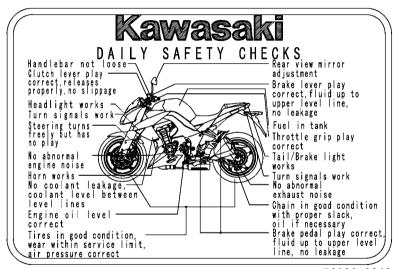


## 11) only on California model

## NOTICE

Never fill tank so fuel level rises into filler neck. If tank is overfilled, heat may cause fuel to expand and flow into Evaporative Emission Control System resulting in hard starting and engine hesitation.

56071-0158 TE03142C S 12)

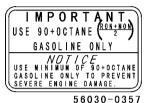

30-0357 TE03172CN9 C

# **ZR1000DA**



\* 9 9 9 8 7 - 1 6 0 7

# **■ K**awasaki

KAWASAKI HEAVY INDUSTRIES,LTD. Consumer Products & Machinery Company

Part No. 99987-1607

Printed in Japan